

FORZA 750 (NSS750)

OWNER'S MANUAL



This manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is resold.

This publication includes the latest production information available before printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

The vehicle pictured in this owner's manual may not match your actual vehicle.

Welcome

Congratulations on your purchase of a new Honda vehicle. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the vehicle.

- The following codes in this manual indicate each destination.
- The illustrations here in are based on the NSS750 ED type.

Destination Codes

Code	Destination
NSS750	
ED	European direct sales, United Kingdom, Israel, Serbia, Gibraltar, Turkey, Hong Kong, Singapore, Tahiti, New Caledonia
II ED	European direct sales
FO	Taiwan
GS	United Arab Emirates, Kuwait, Bahrain, Saudi Arabia, Oman, Qatar
KO	Korea
TH	Thailand

*The specifications may vary with each locale.


A Few Words About Safety

Your safety, and the safety of others, is very important. Operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a vehicle. You must use your own good judgement.

You will find important safety information in a variety of forms, including:

- Safety labels on the vehicle
- Safety Messages preceded by a safety alert symbol  and one of three signal words: DANGER, WARNING, or CAUTION.

These signal words mean:

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION

You **CAN** be **HURT** if you don't follow instructions.

Other important information is provided under the following titles:

NOTICE Information to help you avoid damage to your vehicle, other property, or the environment.

Contents

Vehicle Safety P. 2

Operation Guide P. 20

Maintenance P. 135

Troubleshooting P. 179

Information P. 207

Vehicle Safety

This section contains important information for safe riding of your vehicle.
Please read this section carefully.

Safety Guidelines	P. 3
Image Labels	P. 6
Safety Precautions	P. 11
Riding Precautions	P. 12
Accessories & Modifications	P. 17
Loading	P. 18

Safety Guidelines

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flames away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

Always Wear a Helmet

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. So always wear an approved helmet and protective apparel. 📖 P. 11

Before Riding

Make sure that you are physically fit, mentally focused, and free of alcohol and drugs. Check that you and your passenger are both wearing an approved helmet and protective apparel.

Instruct your passenger on holding onto the grab rails or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the vehicle is stopped.

Take Time to Learn & Practice

Even if you have ridden other vehicles, practice riding in a safe area to become familiar with how this vehicle works and handles, and to become accustomed to the vehicle's size and weight.

Ride Defensively

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

Make Yourself Easy to See

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

Ride within Your Limits

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgement and ride safely.

Don't Drink or Use Drugs and Ride

Alcohol or drugs and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. The same is true for drug use. Don't drink or use and ride, and don't let your friends do it either.

Keep Your Honda in Safe Condition

It's important to keep your vehicle properly maintained and in safe riding condition. Inspect your vehicle before every ride and perform all recommended maintenance. Never exceed load limits (▶ P. 18), and do not modify your vehicle or install accessories that would make your vehicle unsafe (▶ P. 17).

If You are Involved in a Crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first turn the electrical system off, and evaluate the condition of your vehicle. Inspect for fluid leaks, check the tightness of critical nuts and bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously.

Your vehicle may have suffered damage that is not immediately apparent. Have your vehicle thoroughly checked at a qualified service facility as soon as possible.

Carbon Monoxide Hazard

Exhaust contains poisonous carbon monoxide, a colourless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in a confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide.

Never run your vehicle inside a garage or other enclosure.

⚠️ WARNING

Running the engine of your vehicle while in an enclosed or even partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.

Breathing this colourless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your vehicle's engine when it is located in a well ventilated area outdoors.

Image Labels

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read instructions contained in Owner's Manual carefully.



Read instructions contained in Shop Manual carefully. In the interest of safety, take the vehicle to be serviced only by your dealer.



DANGER (with RED background)

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING (with ORANGE background)

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION (with YELLOW background)

You **CAN** be **HURT** if you don't follow instructions.

ED, II ED, FO,
GS type

KO, TH type



BATTERY LABEL DANGER

- Keep flame and spark away from the battery. Battery produce explosive gas that can cause explosion.
- Wear the eye protection and rubber gloves when handling the battery, or you can get burned or lose your eyesight by the battery electrolyte.
- Do not allow children and other people to touch a battery unless they understand proper handling and hazards of the battery very well.
- Handle the battery electrolyte with extreme care as it contains dilute sulfuric acid. Contact with your skin or eyes can burn you or cause loss of your eyesight.
- Read this manual carefully and understand it before handling the battery. Neglect of the instructions can cause personal injury and damage to the vehicle.
- Do not use a battery with the electrolyte at or below the lower level mark. It can explode causing serious injury.



RADIATOR CAP LABEL DANGER

ED, II ED, FO, GS type

NEVER OPEN WHEN HOT.


Hot coolant will scald you.

Relief pressure valve begins to open at **1.1 kgf/cm²**.

ACCESSORIES AND LOADING WARNING LABEL

ED, II ED type

ACCESSORIES AND LOADING

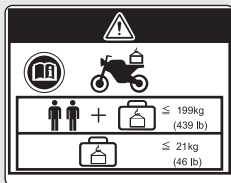


- The safety stability and handling of this vehicle may be affected by the addition of accessories and luggage.
- Read carefully the instructions contained in user's manual and installation guide before installing any accessory.
- The total weight of accessories and luggage added to rider's and passenger's weight should not exceed **199 kg (439 lb)**, which is the maximum weight capacity.
- The luggage weight must not exceed **21 kg (46 lb)** under any circumstances.
- The fitting of large fork-mounted or large handlebar mounted fairing is not recommended.

**REAR CUSHION LABEL**

 ED, II ED, FO, GS type

GAS FILLED

Do not open. Do not heat.

**TYRE INFORMATION & DRIVE CHAIN LABEL**

ED, II ED, FO, GS type

Cold tyre pressure:

[Driver only]

Front **280 kPa (2.80 kgf/cm², 41 psi)**Rear **250 kPa (2.50 kgf/cm², 36 psi)**

[Driver and passenger]

Front **280 kPa (2.80 kgf/cm², 41 psi)**Rear **250 kPa (2.50 kgf/cm², 36 psi)**

Keep chain adjusted and lubricated.

Freeplay **40 - 45 mm (1.6 - 1.8 in)****SEAT DAMPER OPENER LABEL**

GAS FILLED

Do not open. Do not heat.





SAFETY REMINDER LABEL

ED, II ED, FO, GS type

For your protection, always wear helmet, protective apparel.

FUEL LABEL

ED, II ED, FO, GS type

Unleaded petrol only

ETHANOL up to 10 % by volume



CARGO LIMIT LABEL

ED, II ED, FO, GS type

Do not exceed **5.0 kg (11.0 lb)**.



CARGO LIMIT LABEL

ED, II ED, FO, GS type

Do not exceed **0.3 kg (0.66 lb)**.

Safety Precautions

- Ride cautiously and keep your hands on the handlebar and feet on the step board.
- Instruct your passenger to keep their hands on the grab rails or your waist and their feet on the footpegs while riding.
- Always consider the safety of your passenger, as well as other drivers and riders.

Protective Apparel

Make sure that you and any passenger are wearing an approved helmet, eye protection, and high-visibility protective clothing. Avoid wearing loose clothes that could get caught on any part of the vehicle. Ride defensively in response to weather and road conditions.

■ Helmet

Safety-standard certified, high-visibility, correct size for your head

- Must fit comfortably but securely, with the chin strap fastened

- Face shield with unobstructed field of vision or other approved eye protection

⚠ WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

■ Gloves

Full-finger leather gloves with high abrasion resistance

■ Boots or Riding Shoes

Sturdy boots with non-slip soles and ankle protection

■ Jacket and Trousers

Protective, highly visible, long-sleeved jacket and durable trousers for riding (or a protective suit)

Riding Precautions

Running-in Period

During the first 500 km (300 miles) of running, follow these guidelines to ensure your vehicle's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration.
- Avoid hard braking and rapid down-shifts.
- Ride conservatively.

Brakes

Observe the following guidelines:

- Avoid excessively hard braking and downshifting.
 - ▶ Sudden braking can reduce the vehicle's stability.
 - ▶ Where possible, reduce speed before turning; otherwise you risk sliding out.
- Exercise caution on low traction surfaces.
 - ▶ The tyres slip more easily on such surfaces and braking distances are longer.
- Avoid continuous braking.
 - ▶ Repeated braking, such as when descending long, steep slopes can seriously overheat the brakes, reducing their effectiveness. Use engine braking with intermittent use of the brakes to reduce speed.
- For full braking effectiveness, operate both the front and rear brakes together.

| Anti-lock Brake System (ABS)

This model is equipped with an Anti-lock Brake System (ABS) designed to help prevent the brakes from locking up during hard braking.

- ABS does not reduce braking distance. In certain circumstances, ABS may result in a longer stopping distance.
- ABS does not function at speeds below 10 km/h (6 mph).
- The brake levers may recoil slightly when applying the brakes. This is normal.
- Always use the recommended front/rear tyres and sprockets to ensure correct ABS operation.

| Engine Braking

Engine braking helps slow your vehicle down when you release the throttle. For further slowing action, downshift to a lower gear. Use engine braking with intermittent use of the brakes to reduce speed when descending long, steep slopes.

| Wet or Rainy Conditions

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions. If the brakes get wet, apply the brakes while riding at low speed to help them dry.

Parking

- Park on a firm, level surface.
- If you must park on a slight incline or loose surface, park so that the vehicle cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes and other high-temperature parts until they cool down.
- To reduce the likelihood of theft, always lock the handlebar (➤ P. 89), and leave your vehicle while taking the Honda SMART Key with you. Deactivate the Honda SMART Key system if necessary. ➤ P. 92
Use of an anti-theft device is also recommended.

■ Parking with the Side Stand or Centre Stand

1. Stop the engine.
2. Apply the parking brake. ➤ P. 104
3. **Using the side stand**
Push the side stand down.
Slowly lean the vehicle to the left until its weight rests on the side stand.
Using the centre stand
To lower the centre stand, stand on the left side of the vehicle.
Hold the left handle grip and the left grab rail.
Press down on the tip of the centre stand with your right foot and, simultaneously, pull up and back.
4. Turn the handlebar fully to the left.
▶ Turning the handlebar to the right reduces stability and may cause the vehicle to fall.
5. Lock the steering. ➤ P. 89
Then, leave your vehicle while taking the Honda SMART Key with you. Deactivate the Honda SMART Key system if necessary. ➤ P. 92

Refuelling and Fuel Guidelines

Follow these guidelines to protect the engine, fuel system and catalytic converter:

- Use only unleaded petrol.
- Use the recommended octane number.
Using lower octane petrol will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol. ➤ P. 230
- Do not use stale or contaminated petrol or an oil/petrol mixture.
- Avoid getting dirt or water in the fuel tank.

Honda Selectable Torque Control

When the Honda Selectable Torque Control (Torque Control) detects rear wheel spin during acceleration, the system will limit the amount of torque applied to the rear wheel based on the Torque Control level selected.

Torque Control will allow some wheel spin during acceleration at the lower Torque Control setting levels. Select a level that is appropriate for your skill and riding conditions.

Torque Control does not work during deceleration and will not prevent the rear wheel from skidding due to engine braking. Do not close the throttle suddenly, especially when riding on slippery surfaces.

Torque Control may not compensate for rough road conditions or rapid throttle operation. Always consider road and weather conditions,

as well as your skills and condition, when applying throttle.

If your vehicle gets stuck in mud, snow, or sand, it may be easier to free it by turning off the Torque Control temporarily.

Temporarily turning off Torque Control also may help you maintain control and balance when riding on off-road terrain.

Always use the recommended tyres and sprockets to ensure correct Torque Control operation.

Accessories & Modifications

We strongly advise that you do not add any accessories that were not specifically designed for your vehicle by Honda or make modifications to your vehicle from its original design. Doing so can make it unsafe. Modifying your vehicle may also void your warranty and make your vehicle illegal to operate on public roads. Before deciding to install accessories on your vehicle, be certain the modification is safe and legal.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your vehicle. Your vehicle was not designed for these attachments, and their use can seriously impair your vehicle's handling.

Loading


- Carrying extra weight affects your vehicle's handling, braking and stability. Always ride at a safe speed and never exceed 130 km/h (80 mph) for the load you are carrying.
- Avoid carrying an excessive load and keep within specified load limits.
Maximum weight capacity / Maximum luggage weight 📖 P. 232
- Tie all luggage securely, evenly balanced, and close to the centre of the vehicle.
- Do not place objects near the lights or the muffler.


WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Parts Location

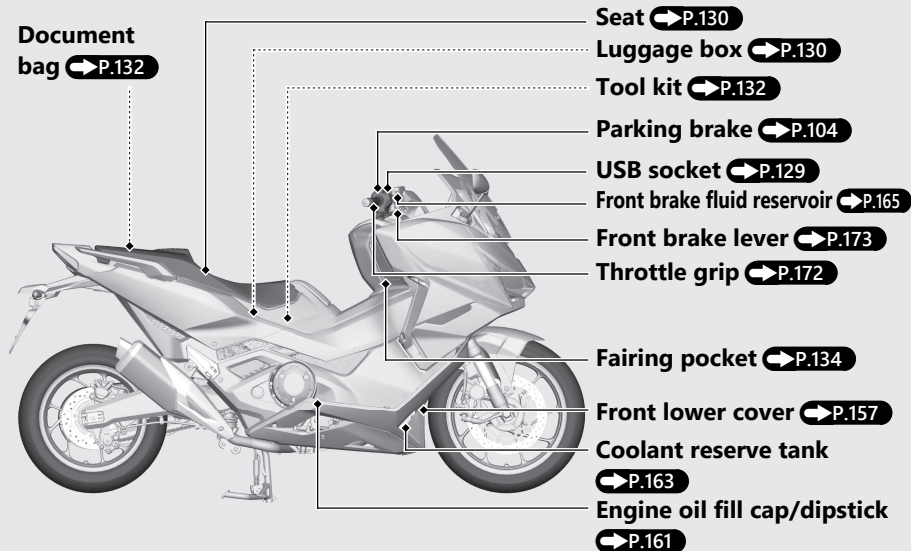

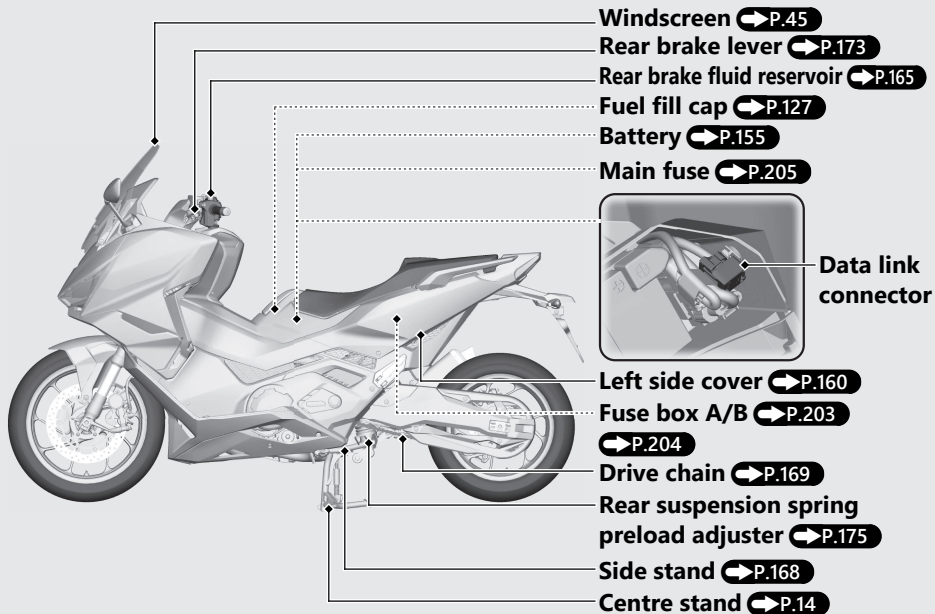


Instruments




Do not operate the display functions for a long time with the engine stopped. It may result in a low (or dead) battery.

You can change the speed and mileage, and fuel mileage meter units. [➡P.47](#) [➡P.66](#)

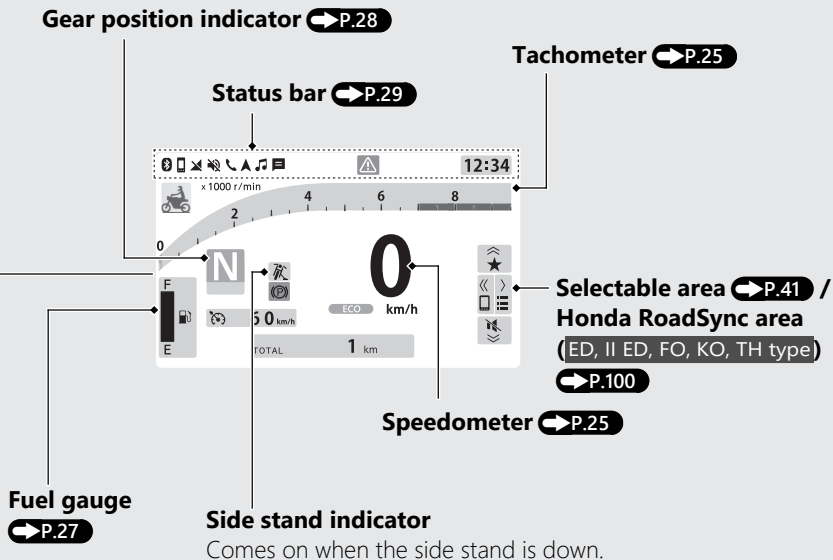

Instruments (Continued)

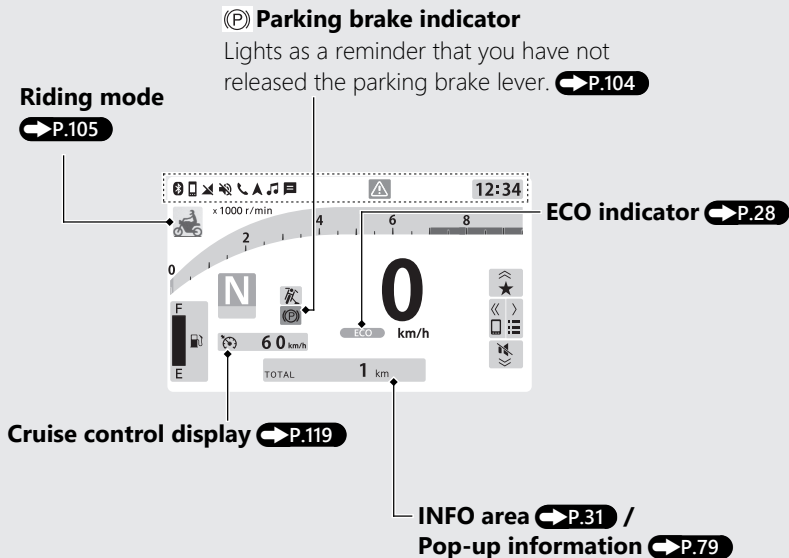


Speedometer/Tachometer/INFO area/Cruise control display

Display type: BAR

Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

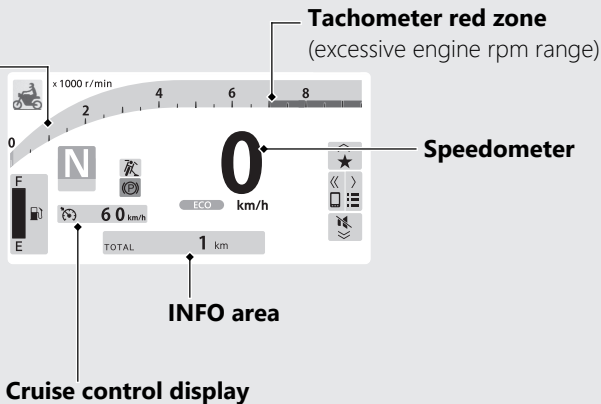

Instruments (Continued)


This meter has three display types.

The display and arrangement of speedometer, tachometer, cruise control display, and INFO area change depending on each display type.


- ▶ The tachometer is not displayed when select the SIMPLE type display.

To change the display type: ➡P.47 ➡P.57

Display type: CIRCLE

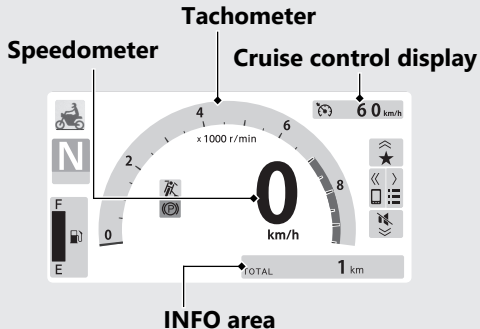

Display type: SIMPLE

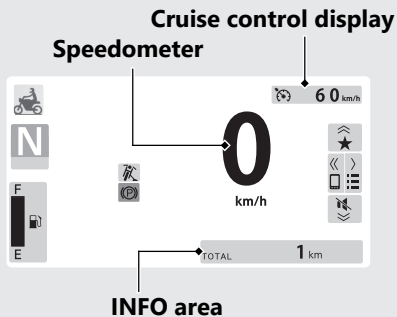

Fuel gauge



Remaining fuel when only 1st (E) segment starts flashing: approximately 2.5 L (0.66 US gal, 0.55 Imp gal)

► **If the fuel gauge indicator flashes in a repeat pattern or turns off:** ➔ **P.188**

NOTICE

You should refuel when the reading approaches the E (1st) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

Instruments (Continued)


Gear position indicator

The gear position is shown in the gear position indicator.

The indicator may flash if:

- ▶ The front wheel leaves the ground.
- ▶ You turn the wheel while the vehicle is upright on the stand.

This is normal. To operate the system again, turn the electrical system off and on again.

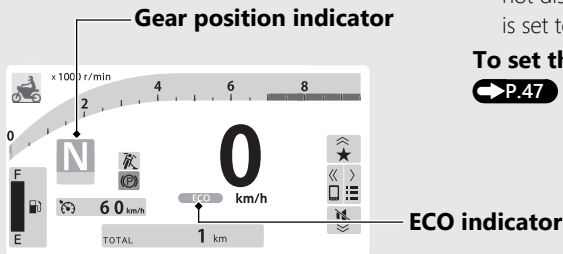

ECO indicator

The ECO indicator comes on according to the fuel mileage.

When the fuel consumption is improved, ECO indicator comes on.

- ▶ The ECO indicator is not displayed at speeds below approximately 20 km/h (12 mph).
- ▶ When the riding mode is set to SPORTS, USER 1 or USER 2, the ECO indicator is not displayed even if the ECO indicator is set to on.

To set the ECO indicator

➡ P.47 ➡ P.57

Status bar




ED, II ED, FO, KO, TH type

Status icons

Displays the status of the Honda RoadSync system. [➔P.100](#)

 **High beam indicator**

 **DRL indicator** [➔P.126](#)

 **Warning indicator**

Comes on when your vehicle has warning information.

Also displays as pop-up information in the INFO area and WARNING INFO display. [➔P.77](#) [➔P.81](#)

Air temperature [➔P.30](#)

Clock (12-hour or 24-hour display)

To set the clock: [➔P.47](#) [➔P.65](#)

Instruments *(Continued)*


Air temperature

Displays the ambient temperature.

Display range: -10 °C to 50 °C

- Less than -10°C: "---" is displayed
- Above 50°C: 50°C flashes

Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 30 km/h (19 mph). It may take several minutes for the display to be updated after the temperature reading has stabilized.

Display or hide the air temperature  **P.64**

INFO area

The INFO area displays various vehicle information.

The following items are displayed by default.


- Odometer [TOTAL]
- Current fuel mileage [INST. CONS.]
- Tripmeter A [TRIP A]
- Tripmeter B [TRIP B]

The information item displayed in the INFO area can be changed arbitrarily.

Up to 10 items are available. (Including Blank)
If no item is selected or only Blank is selected, the INFO area has no items.

To change the information: ➡ P.47


➡ P.60

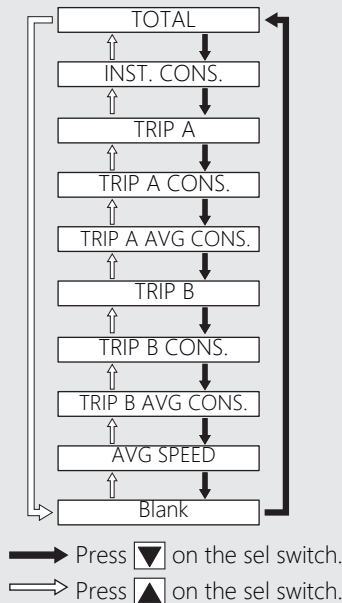


Instruments *(Continued)*

The types of information item that can be displayed in the INFO area are as follows:

TOTAL  P.32


INST. CONS.  P.33


TRIP A  P.34


TRIP A CONS.  P.34

TRIP A AVG CONS.  P.35

TRIP B  P.37

TRIP B CONS.  P.37



TRIP B AVG CONS.  P.38

AVG SPEED  P.40

Blank  P.40

Odometer [TOTAL]

Total distance ridden.

TOTAL **1** km  

When "-----" is displayed, go to your dealer for service.

 
 
Current fuel mileage [INST. CONS.]

ED, II ED, FO, KO, TH type

Displays the instantaneous fuel mileage as a bar graph.

Display range: 0 to 4 L/100 km (40 km/L, 100 mile/gal, 25 mile/L)

- When your speed is less than 5 km/h (3 mph): "zero segment" is displayed.

**Zero segment**

 
When "zero segment" is displayed, except for the above-mentioned cases, go to your dealer for service.

GS type

Displays the instantaneous fuel mileage as a bar graph.

Display range: 0 to 40 km/L (4 L/100 km)

- When your speed is less than 5 km/h: "zero segment" is displayed.

**Zero segment**

When "zero segment" is displayed, except for the above-mentioned cases, go to your dealer for service.


Instruments *(Continued)*

Tripmeter A [TRIP A]

Distance ridden since the tripmeter A was reset.

TRIPA **125.0** km 

When "----.-" is displayed, go to your dealer for service.

To reset the tripmeter A:  **P.42**

 **P.46**

Tripmeter A fuel consumption [CONS.A]

Displays the tripmeter A fuel consumption since the tripmeter A was reset.

ED, II ED, FO, KO, TH type

Display range: 0.0 to 299.9 L (gal)


GS type

Display range: 0.0 to 299.9 L

CONS A **4.8** L 

When "----.-" is displayed go to your dealer for service.

Tripmeter A fuel consumption is reset when you reset tripmeter A.

To reset the tripmeter A:  **P.42**

 **P.46**

Tripmeter A average fuel mileage [AVG CONS. A]

ED, II ED, FO, KO, TH type

Displays the average fuel mileage since the tripmeter A was reset.

The average fuel mileage will be calculated based on the value on tripmeter A.

Display range: 0.0 to 299.9 L/100 km (km/L, mile/gal or mile/L)

- Above 299.9 L/100km : "--.-" is displayed.
- Above 299.9 km/L (mile/gal or mile/L) : "299.9" is displayed.
- When the average fuel mileage is reset: "---.-" is displayed.

AVG CONS. A **3.0** L/100km  

When "---.-" is displayed except for the above-mentioned cases, go to your dealer for service.

Tripmeter A average fuel mileage is reset when you reset tripmeter A.

To reset the tripmeter A:  **P.42**

 **P.46**

Instruments *(Continued)*

GS type

Displays the average fuel mileage since the tripmeter A was reset.

The average fuel mileage will be calculated based on the value on tripmeter A.

Display range: 0.0 to 299.9 km/L (L/100 km)

- Above 299.9 km/L : "299.9" is displayed.
- Above 299.9 L/100km : "---.-" is displayed.
- When the average fuel mileage is reset: "---.-" is displayed.



AVG CONS. A **30** km/L  

When "---.-" is displayed except for the above-mentioned cases, go to your dealer for service.

Tripmeter A average fuel mileage is reset when you reset tripmeter A.

To reset the tripmeter A:  **P.42**

 **P.46**

Tripmeter B [TRIP B]

Distance ridden since the tripmeter B was reset.

TRIP B **250.0** km 

When "----.-" is displayed, go to your dealer for service.

To reset the tripmeter B:  **P.42**

 **P.46**

Tripmeter B fuel consumption [CONS.B]

Displays the tripmeter B fuel consumption since the tripmeter B was reset.

ED, II ED, FO, KO, TH type

Display range: 0.0 to 299.9 L (gal)

GS type

Display range: 0.0 to 299.9 L

CONS.B **11.4** L 

When "---.-" is displayed go to your dealer for service.

Tripmeter B fuel consumption is reset when you reset tripmeter B.

To reset the tripmeter B:  **P.42**

 **P.46**

Instruments *(Continued)*

Tripmeter B average fuel mileage [AVG CONS. B]

ED, II ED, FO, KO, TH type

Displays the average fuel mileage since the tripmeter B was reset.

The average fuel mileage will be calculated based on the value on tripmeter B.

Display range: 0.0 to 299.9 L/100 km (km/L, mile/gal or mile/L)

- Above 299.9 L/100km : "--.-" is displayed.
- Above 299.9 km/L (mile/gal or mile/L) : "299.9" is displayed.
- When the average fuel mileage is reset: "---.-" is displayed.

AVG CONS.B **3.8** L/100km  

When "---.-" is displayed except for the above-mentioned cases, go to your dealer for service.

Tripmeter B average fuel mileage is reset when you reset tripmeter B.

To reset the tripmeter B:  **P.42**

 **P.46**



GS type

Displays the average fuel mileage since the tripmeter B was reset.

The average fuel mileage will be calculated based on the value on tripmeter B.

Display range: 0.0 to 299.9 km/L (L/100 km)

- Above 299.9 km/L : "299.9" is displayed.
- Above 299.9 L/100km : "--.-" is displayed.
- When the average fuel mileage is reset: "---.-" is displayed.

AVG CONS. B **25** km/L  

When "--.-" is displayed except for the above-mentioned cases, go to your dealer for service.

Tripmeter B average fuel mileage is reset when you reset tripmeter B.

To reset the tripmeter B:  **P.42**

 **P.46**

Instruments *(Continued)*

Average speed [AVG SPEED]

Displays average speed since the engine was started.

ED, II ED, FO, KO, TH type

Display range: 0 to 299 km/h (0 to 186 mph)

GS type

Display range: 0 to 299 km/h

 
- Initial display: "---" is displayed.
- When your vehicle has traveled less than 0.2 km since the engine was started: "---" is displayed.
- When your vehicle operating time is less than 16 seconds since the engine was started: "---" is displayed.

AVG SPEED **34** km/h

When "---" is displayed except for the above-mentioned cases, go to your dealer for service.

Blank display

Display is the blank.



Selectable area

You can select the following:


- General menu ➡ **P.42**
- FAVORITE SWITCH
 - ▶ The FAVORITE SWITCH function works as a "short cut" which allows to access directly the item in General menu. The item can be set according to your preference. ➡ **P.47** ➡ **P.63**

ED, II ED, FO, KO, TH type

- Honda RoadSync transition ➡ **P.100**
- Honda RoadSync mute

Honda RoadSync transition and Honda RoadSync mute can be selected only when your smartphone is connected to the vehicle.

To connect the device ➡ **P.103**

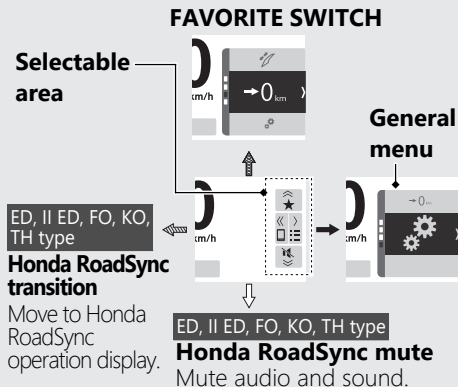


- ➡ Press and hold the on the sel switch
- ➡ Press on the sel switch
- ➡ Press and hold the on the sel switch
- ➡ Press and hold the on the sel switch

Instruments *(Continued)*

General Menu

You can select the following:

- Status mode
- Windscreen mode
- Trip reset mode
- Setting mode

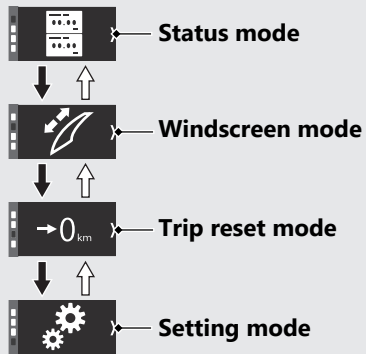


➔ Press  on the sel switch.


⇨ Press  on the sel switch.

Status mode

The Status mode displays various vehicle information.

The Status mode has four pages and displays two pieces of information on each page. The fifth page displays the selected riding mode.

Press  on the sel switch while selecting the status mode, display moves to vehicle information page.

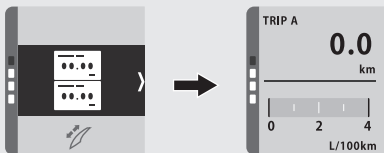



The information items on the four pages displayed in status mode can be changed as desired.

To change the information:  **P.47**

 **P.60**

Instruments *(Continued)*


To switch the information page

To change the information page, press  or  on the sel switch.


Page 1




Page 2

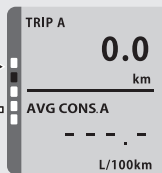


Page 3

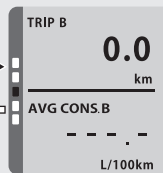

Page 4

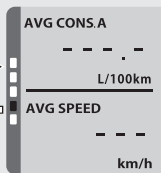

Riding mode

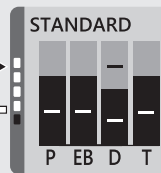





 Press  on the sel switch.


 Press  on the sel switch.


To change the information:  P.47  P.60

Windscreen mode

You can adjust the windscreen height.

1. Press  on the sel switch while selecting the windscreen mode  (P.42), display moves to windscreen adjusting page.
2. Press  or  on the sel switch to adjust the windscreen height.
 - ▶ The windscreen moves to the lowest position automatically when the electrical system is turned off.
 - ▶ The windscreen returns to the position before the electrical system is turned off when the vehicle speed reaches approximately 5 km/h (3 mph).


To keep the windscreen raised after turning off the electrical system, such as when washing it, turn the electrical system off while pressing  on the sel switch with the windscreen mode selected.

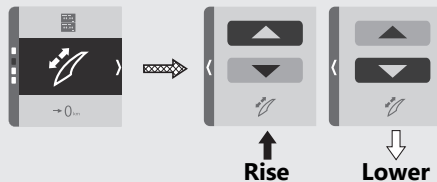

 Press the  on the sel switch

 Press  on the sel switch.

 Press  on the sel switch.

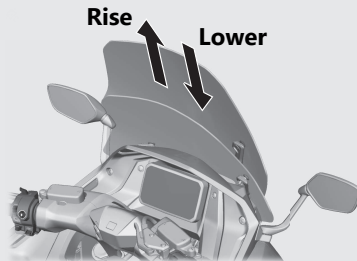


Instruments (Continued)

Trip reset mode

You can reset the tripmeter A or tripmeter B.


1. Select the trip reset mode. P.42
2. Press on the sel switch.

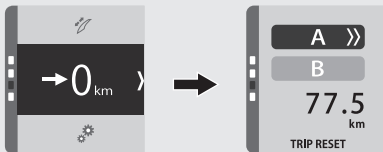

3. Select the A or B by pressing the or on the sel switch.



4. Press and hold the on the sel switch. The tripmeter A or B is reset.

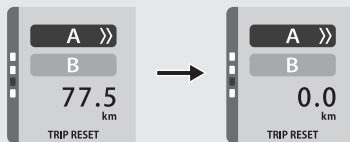


Also, the tripmeter A, tripmeter A fuel consumption and tripmeter A average fuel mileage are automatically reset when the fuel gauge segment increases by 2 or more after refuelling and riding your vehicle for 0.1 km (0.06 mile). You can activate or deactivate the automatic reset mode. P.47 P.56

Setting mode

To shift to the setting mode

1. Select the general menu. P.41
2. Select the setting mode. P.42
3. Press on the sel switch, and then display moves to the setting mode.
 - ▶ Operation while driving is prohibited.

Ordinary display

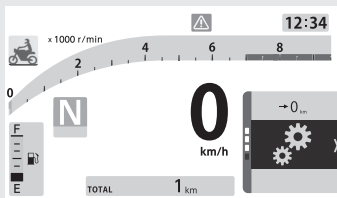

Setting mode

The setting mode screen displays a menu with the following items:


0 km/h		SETTING	12:34
FUNCTION	1	RIDING MODE	
DISPLAY		SHIFT POINT	
GENERAL		SELF CANCELLING TURN SIGNALS	
SERVICE		DRL	
		TRIP A AUTO RESET	
		ECO INDICATOR	
FUNCTION			


To return to the ordinary display







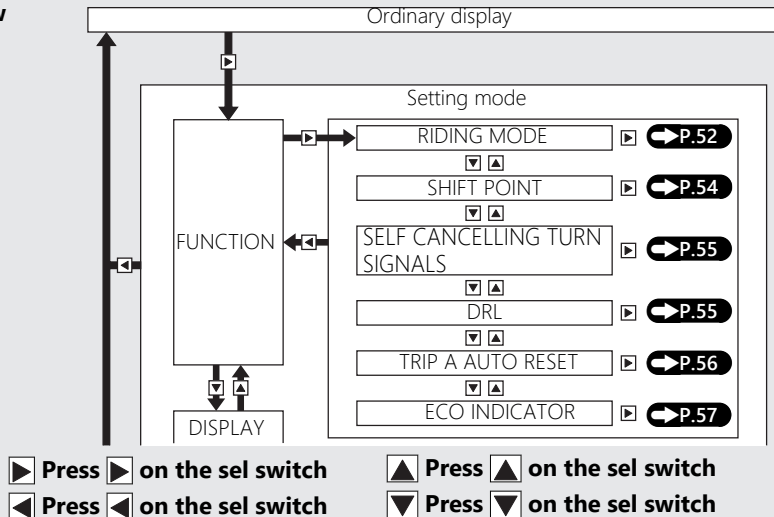

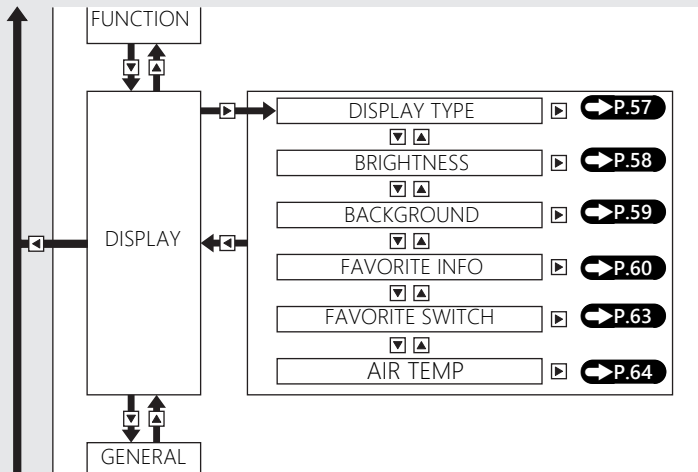- Press on the sel switch until return to the ordinary display.
- Turn the electrical system is off and on again.

Instruments *(Continued)*


Setting flow






-  : Press the  on the sel switch
-  : Press the  on the sel switch
-  : Press the  on the sel switch
-  : Press the  on the sel switch

Instruments (Continued)

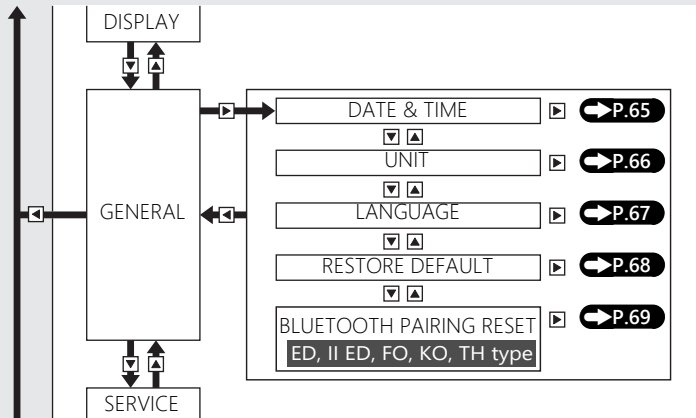

- ▶ Press ▶ on the sel switch
- ◀ Press ◀ on the sel switch
- ▲ Press ▲ on the sel switch
- ▼ Press ▼ on the sel switch

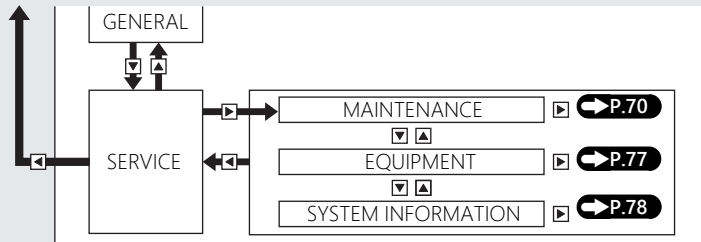

▶ Press ▶ on the sel switch

◀ Press ◀ on the sel switch

▲ Press ▲ on the sel switch





 




▼ Press ▼ on the sel switch


Instruments (Continued)

RIDING MODE P.105

1. USER MODE





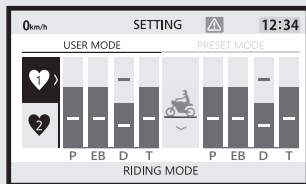

You can change the setting value of the USER MODE.


- 1 Select the USER 1 or USER 2 using  or  of the sel switch.
- 2 Select the parameter ("P", "EB", "D" or "T") using  or  of the sel switch.
- 3 Select the desired setting value using  or  of the sel switch.
- 4 Press  on the sel switch to complete the setting.
- 5 Return to the ordinary display to complete the setting.  P.47
To continue setting, press  on the sel switch to return to the upper hierarchy.



2. PRESET MODE

You can confirm the preset riding mode setting value of the [STANDARD], [SPORT] and [RAIN].

- 1 Select the PRESET MODE using  of the sel switch.
- 2 Select the desired riding mode using  or  of the sel switch.
- 3 Press  on the sel switch to return to the USER MODE.
- 4 Return to the ordinary display.  **P.47**
To continue setting, press  on the sel switch to return to the upper hierarchy.

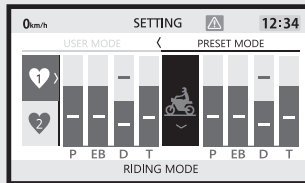


Instruments *(Continued)*

SHIFT POINT

| (On) / **○** (Off): You can activate or deactivate the shift indicator.

SHIFT POINT : You can change the engine revolutions at which the tachometer start blinking in the shift indicator.


- 1 Select the **|** (On) or **○** (Off) using **▲** or **▼** on the sel switch.

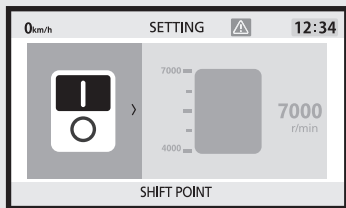

- 2 When select the **|** (On)

Press **▶** on the sel switch to select the desired setting (r/min) using **▲** or **▼** on the sel switch.

Press **◀** on the sel switch to complete the setting.

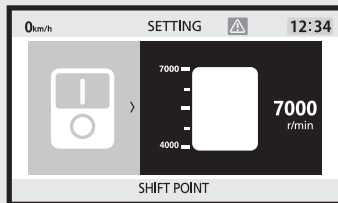

- When select the **○** (Off)

Press **◀** on the sel switch to complete the setting.

- 3 Return to the ordinary display to complete the setting. **➡ P.47**


To continue setting, press **◀** on the sel switch to return to the upper hierarchy.

SELF CANCELLING TURN SIGNALS

You can enable or disable turn signal automatic cancellation. ➡P.86

- 1 Select the **|** (On) or **○** (Off) using **▲** or **▼** on the sel switch.
- 2 Press **◀** on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. ➡P.47

To continue setting, press **◀** on the sel switch to return to the upper hierarchy.

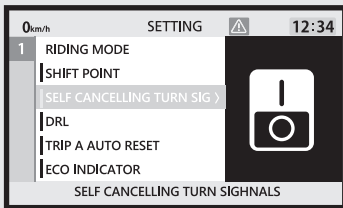


DRL

You can enable or disable DRL. ➡P.126

- 1 Select the **|** (Auto) or **○** (Off) using **▲** or **▼** on the sel switch.
- 2 Press **◀** on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. ➡P.47

To continue setting, press **◀** on the sel switch to return to the upper hierarchy.

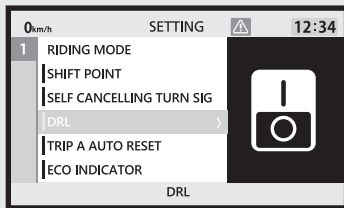


Instruments *(Continued)*

TRIP A AUTO RESET

You can enable or disable the tripmeter A automatic reset mode.

- 1 Select the (On) or (Off) using ▲ or ▼ on the sel switch.
- 2 Press ◀ on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. **➡P.47**

To continue setting, press ◀ on the sel switch to return to the upper hierarchy.

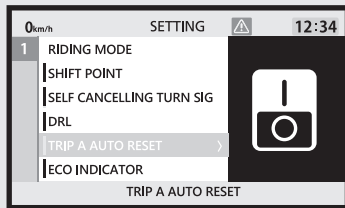


ECO INDICATOR

You can enable or disable the ECO indicator.

➔ P.28

- 1 Select the **I** (On) or **O** (Off) using **▲** or **▼** on the sel switch.
- 2 Press **◀** on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. ➔ P.47

To continue setting, press **◀** on the sel switch to return to the upper hierarchy.

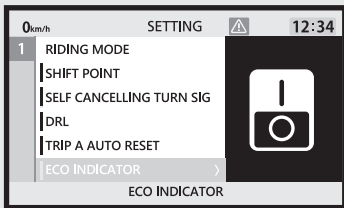


DISPLAY TYPE

You can change the display type. ➔ P.25

- 1 Select the display type ("BAR", "CIRCLE" or "SIMPLE") using **▲** or **▼** on the sel switch.
- 2 Press **◀** on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. ➔ P.47

To continue setting, press **◀** on the sel switch to return to the upper hierarchy.

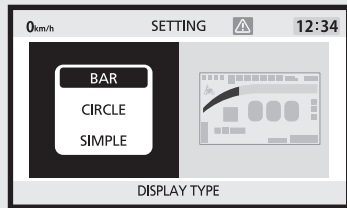

Instruments (Continued)


BRIGHTNESS

You can adjust the backlight brightness to one of the eight levels or select the auto adjustment.

Automatic brightness control: ➡ P.214

The display can become dark when the display is very hot. If it does not restore the original brightness, contact your dealer.

- 1 Select the "AUTO" or "MANUAL" using ▲ or ▼ on the sel switch.

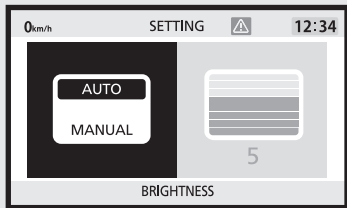


- 2 **When select the "AUTO"**
Press ◀ on the sel switch to complete the setting.

When select the "MANUAL"

Press ▶ on the sel switch to select the backlight brightness using ▲ or ▼ on the sel switch.

Press ◀ on the sel switch to complete the setting.

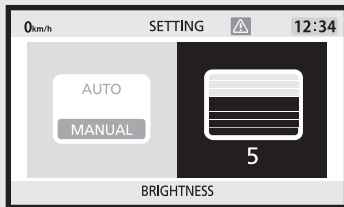


- 3 Return to the ordinary display to complete the setting. ➡ P.47
To continue setting, press ◀ on the sel switch to return to the upper hierarchy.

BACKGROUND

You can change the setting of the background to one of the two colors or select the auto adjustment.

- 1 Select the background colour using ▲ or ▼ on the sel switch.
- 2 Press ◀ on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting. ➡ P.47

To continue setting, press ◀ on the sel switch to return to the upper hierarchy.

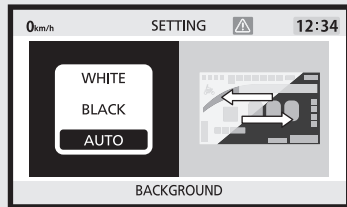

Instruments *(Continued)*

FAVORITE INFO

You can change the information items displayed in the INFO area and status mode.

1 line information


You can change the information items displayed in the INFO area. ➡ P.31



1 line information setting: ➡ P.61


2 line information

You can change the information items displayed in the information page of status mode. ➡ P.43

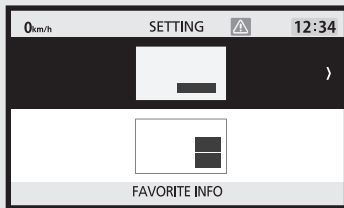

2 line information setting: ➡ P.62





Select the 1 line or 2 line information using  or  on the sel switch.


Press  on the sel switch, display moves to the 1 line or 2 line information setting.



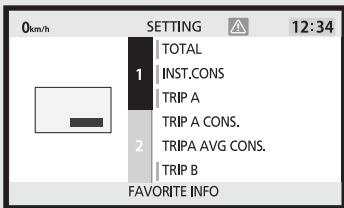


1 line information setting

- ① Select the 1 or 2 using  or  on the sel switch.

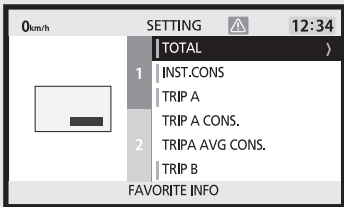


- ② Press  on the sel switch to select the information items.



- ③ Select the desired information setting using  or  on the sel switch.
- ④ Press  on the sel switch, set the information item.
- ▶ Items that have already been set are displayed with a green cursor.
 - ▶ Up to 10 items are available. (Including BLANK)
- ⑤ Press  on the sel switch to complete the setting.
- ⑥ Return to the ordinary display to complete the setting. **➡P.47**
- To continue setting, press  on the sel switch to return to the upper hierarchy.


Instruments *(Continued)*

2 line information setting

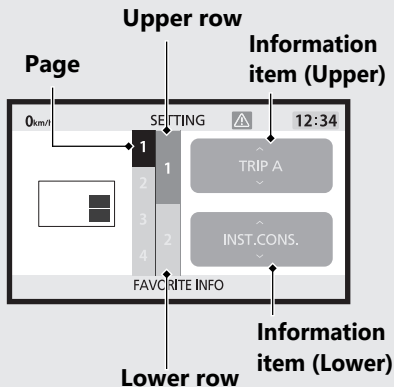



- 1 Select the desired page using ▲ or ▼ on the sel switch.
- 2 Press ► on the sel switch to select the upper or lower row.

- 3 Select the upper or lower row using ▲ or ▼ on the sel switch.

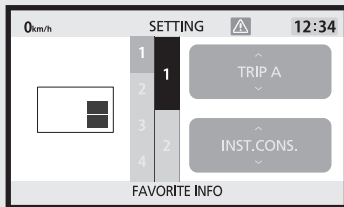


- 4 Press ► on the sel switch to select the information items.
- 5 Select the desired information item using ▲ or ▼ on the sel switch.

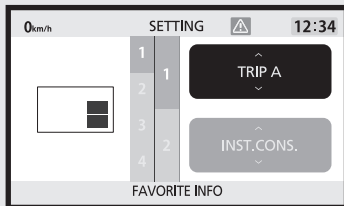

6 Press  on the sel switch to complete the setting.


7 Return to the ordinary display to complete the setting.  P.47




To continue setting, press  on the sel switch to return to the upper hierarchy.

FAVORITE SWITCH

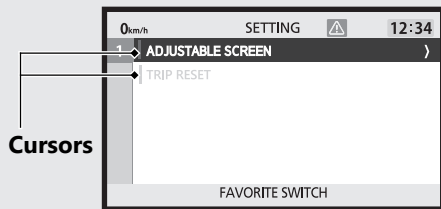


You can set one item which works as the FAVORITE SWITCH function.

FAVORITE SWITCH:  P.41



- 1 Select the item using  or  on the sel switch.
- 2 Press  on the sel switch to activate the FAVORITE SWITCH function for selected item.
 - ▶ The cursor on the activated item changes to green.







Instruments *(Continued)*


- 3 Press  on the sel switch to complete the setting.
- 4 Return to the ordinary display to complete the setting.  P.47
To continue setting, press  on the sel switch to return to the upper hierarchy.


AIR TEMP

You can display or hide the air temperature.





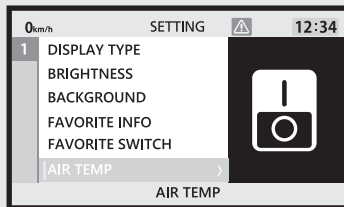


 P.30


- 1 Select the  (On) or  (Off) using  or  on the sel switch.
- 2 Press  on the sel switch to complete the setting.
- 3 Return to the ordinary display to complete the setting.  P.47

To continue setting, press  on the sel switch to return to the upper hierarchy.



DATE & TIME

- 1 Select the "Day", "Month", "Year", "Hour", "Minute", "24h or 12h" or "AM / PM" using  or  on the sel switch.
- 2 Select the desired setting using  or  on the sel switch.
 - ▶ When "24 / 12" is set to 24-hour indication, "AM / PM" cannot be usable.
- 3 Press  on the sel switch to complete the setting.
- 4 Return to the ordinary display to complete the setting.  **P.47**
To continue setting, press  on the sel switch to return to the upper hierarchy.
 - ▶ The set value is retained.

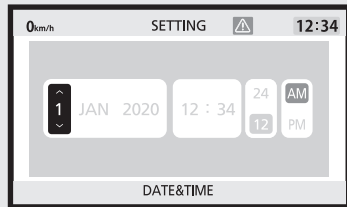








Setting range


Date: 1 to 31
 Month: JAN to DEC
 Year: 2020 to 2099
 Hour: 0 to 23
 Minute: 00 to 59
 24/12: 24 or 12
 AM/PM: AM or PM

Instruments *(Continued)*

UNIT

You can change the speed and mileage (ED, II ED, FO, KO, TH type), and fuel mileage meter units.

- 1 Select the "SPEED" (ED, II ED, FO, KO, TH type) or "FUEL CONS." using  or  on the sel switch.
- 2 Select the desired setting using  or  on the sel switch.
- 3 Press  on the sel switch to complete the setting.
- 4 Return to the ordinary display to complete the setting.  **P.47**
To continue setting, press  on the sel switch to return to the upper hierarchy.
▶ The set value is retained.

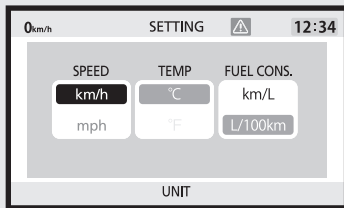

If you want to select "L/100km" or "km/L" for fuel consumption, "km/h" must be selected in the "SPEED" menu in advance.


ED, II ED, FO, KO, TH type

If you want to select "mile/gal" or "mile/L" for fuel consumption, "mph" must be selected in the "SPEED" menu in advance.


LANGUAGE

Changes the system language.

- 1 Select the 1 or 2 using ▲ or ▼ on the sel switch.

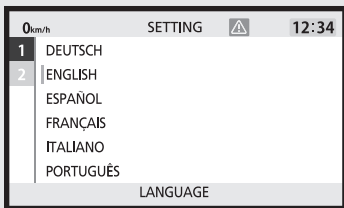

- 2 Press ► on the sel switch.

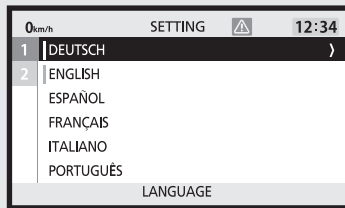



- 3 Select the language using ▲ or ▼ on the sel switch.
- 4 Press ► on the sel switch to select the language.
 - Items that have already been set are displayed with a green cursor.
- 5 Press ◀ on the sel switch to complete the setting.
- 6 Return to the ordinary display to complete the setting. ➔ P.47
To continue setting, press ◀ on the sel switch to return to the upper hierarchy.


Instruments *(Continued)*

RESTORE DEFAULT

The set values can be returned to the default settings.


1 Select the "NO" (not restore) or "YES" (restore) using the  or  on the sel switch.

2 **When the "NO" is selected**

Press the  on the sel switch. The set value is maintained, and then the display returns to the upper level hierarchy.

When the "YES" is selected

Press and hold the  on the sel switch. The set value return to default setting.

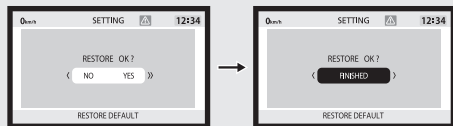

The following items are restored to their default values:


- RIDING MODE
- SHIFT POINT
- TRIP A AUTO RESET
- DISPLAY TYPE
- BRIGHTNESS
- BACKGROUND
- FAVORITE INFO
 - ▶ The page of the currently selected INFO area and status mode are also initialized.
- FAVORITE SWITCH
- UNIT
- LANGUAGE
- SELF CANCELLING TURN SIGNALS
- ECO INDICATOR
- AIR TEMP

BLUETOOTH PAIRING RESET


ED, II ED, FO, KO, TH type

You can reset the pairing record of *Bluetooth*®.


To connect the device ➔ P.103


1 Select the “NO” (not reset) or “YES”(reset) using the  or  on the sel switch.

2 **When the “NO” is selected**

Press the  on the sel switch. The pairing record is maintained, and then the display returns to the upper level hierarchy.

When the “YES” is selected

Press and hold the  on the sel switch. The pairing record is reset.

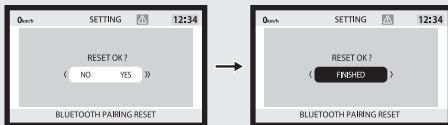






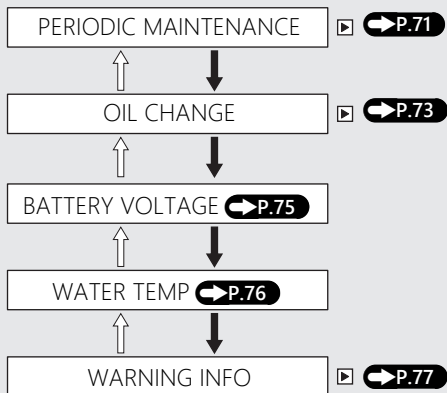
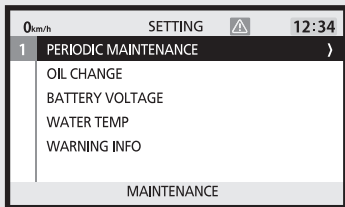
- ▶ If the pairing information remains in your smartphone even if the pairing information is deleted from the vehicle, the smartphone may be connected to the vehicle again.

Instruments (Continued)

MAINTENANCE

You can select the following:

- PERIODIC MAINTENANCE  P.71
- OIL CHANGE  P.73
- BATTERY VOLTAGE  P.75
- WATER TEMP  P.76
- WARNING INFO  P.77



 Press  on the sel switch.


 Press  on the sel switch.

 Press the  on the sel switch

PERIODIC MAINTENANCE

You can check the next periodic inspection time.

You can program a reminder for the next periodic inspection time.

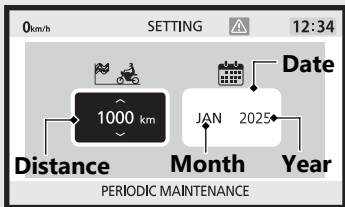

Display range:

Distance:

ED, II ED, FO, KO, TH type

-----, 12,000 to -99,999 km (8,000 to -99,999 mile)

- ▶ Pass 0 km (0 mile): "-" mark is displayed.
- ▶ Changing the SPEED unit from "mile" to "km" will also display ranges over 12,000 km, depending on the distance.

GS type

-----, 12,000 to -99,999 km

- ▶ Pass 0 km: "-" mark is displayed.



Date:


Month: ---, JAN to DEC




Year: ----, 2020 to 2099

Instruments (Continued)

Next inspection setting

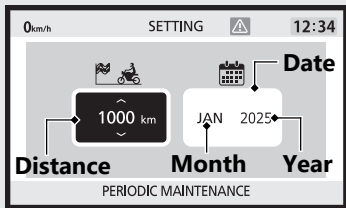- 1 Select the distance, month or year using  or  on the sel switch.



- 2 Select the desired setting using  or  on the sel switch.
 - ▶ If you press and hold  on the sel switch while setting the distance, it will move every 1000.

- ▶ Available setting range of the distance:

ED, II ED, FO, KO, TH type

-----, 100 to 12,000 km (100 to 8,000 mile)

Initial setting:-----

GS type

-----, 100 to 12,000 km

Initial setting:-----


- ▶ Available setting range of the date:


Month:---, JAN to DEC

Initial setting:---


Year: ----, 2020 to 2099

Initial setting:----

- ▶ Maintenance information ( **P.79**) will not be displayed if the distance and date are set to the initial settings.


- 3 Press  on the sel switch to complete the setting.

- 4 Return to the ordinary display to complete the setting.  **P.47**

To continue setting, press  on the sel switch to return to the upper hierarchy.

OIL CHANGE

You can check the next engine oil change.
You can program a reminder for the next engine oil change.

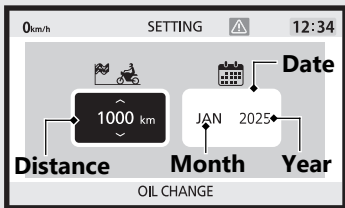

Display range:

Distance:

ED, II ED, FO, KO, TH type

-----, 12,000 to -99,999 km (8,000 to -99,999 mile)

- ▶ Pass 0 km (0 mile): "-" mark is displayed.
- ▶ Changing the SPEED unit from "mile" to "km" will also display ranges over 12,000 km, depending on the distance.

GS type

-----, 12,000 to -99,999 km

- ▶ Pass 0 km (0 mile): "-" mark is displayed.



Date:


Month: ---, JAN to DEC




Year: ----, 2020 to 2099



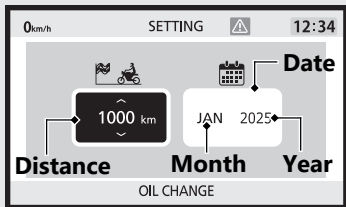

Instruments (Continued)

Next oil change setting

- 1 Select the distance, month or year using  or  on the sel switch.




- 2 Select the desired setting using  or  on the sel switch.
 - ▶ If you press and hold  on the sel switch while setting the distance, it will move every 1000.

- ▶ Available setting range of the distance:
 - ED, II ED, FO, KO, TH type**
-----, 100 to 12,000 km (100 to 8,000 mile)
 - Initial setting:-----
 - GS type**
-----, 100 to 12,000 km
 - Initial setting:-----
 - ▶ Available setting range of the date:
 - Month:---, JAN to DEC
 - Initial setting:---
 - Year: ----, 2020 to 2099
 - Initial setting:----
 - ▶ Maintenance information ( **P.79**) will not be displayed if the distance and date are set to the initial settings.
- 3 Press  on the sel switch to complete the setting.
 - 4 Return to the ordinary display to complete the setting.  **P.47**
To continue setting, press  on the sel switch to return to the upper hierarchy.

When reaching any of the following, the pop-up information is appears in the ordinary display. **➡P.79**

- "500 km" ("300 mile") from the next periodic inspection.
- "100 km" ("60 mile") from the next engine oil change.
- One month before the set month.


Periodic inspection

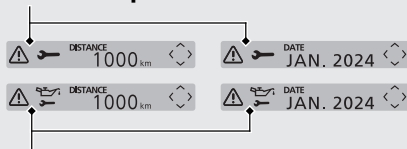

Oil change information

BATTERY VOLTAGE


Displays the current voltage.

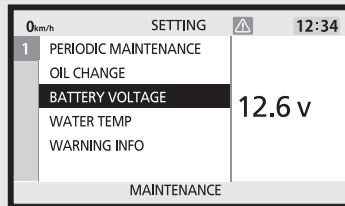

Instruments *(Continued)*

WATER TEMP

Displays the current coolant temperature.

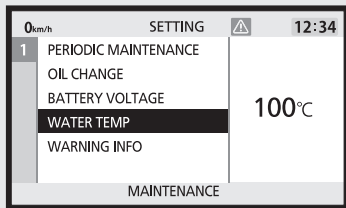

Display range: 35°C to 132°C

- 34°C or less: “---” is displayed.
- Between 122°C and 131°C:
 - High coolant temperature indicator and warning indicator come on. The high coolant temperature indicator is displayed in the warning information. **➡P.77** **➡P.81**
 - Coolant temperature digits flash.

- Above 132°C:
 - High coolant temperature indicator and warning indicator come on. The high coolant temperature indicator is displayed in the warning information. **➡P.77** **➡P.81**
 - “132°C” flashes.
- Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

If the coolant temperature “---” flashes.

➡P.189


WARNING INFO

Displays a current maintenance information, helpful Information and (or) warning information. ➔ P.79

If your vehicle has warning information, have your vehicle inspected by your dealer as soon as possible.

Helpful Information


Warning information

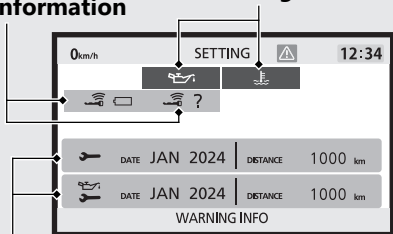

Maintenance information

EQUIPMENT


"EQUIPMENT" is displayed but not selectable.

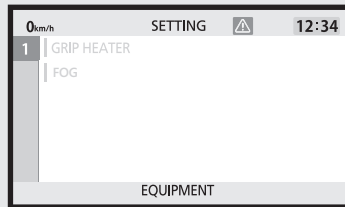

Instruments *(Continued)*

SYSTEM INFORMATION

Displays the software version and hardware information.

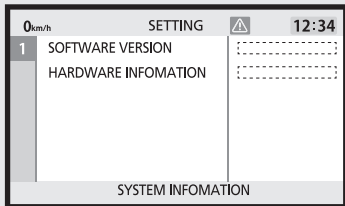













Pop-up information

In the following cases, pop-up information is displayed at the INFO area.

- Maintenance information:
When the inspection time of your vehicle is approaching.
- Helpful information:
When your vehicle has helpful information.
- Warning information:
When your vehicle has warning information.



When your vehicle has multiple pieces of information, pop-up information display appears alternately.





Maintenance Information

Indication	Explanation	Remedy
  DISTANCE 1000 km 	When the periodic inspection time of your vehicle is approaching.	Have your vehicle inspected by your dealer.
  DATE JAN 2024 		
  DISTANCE 1000 km 	When the oil change time of your vehicle is approaching.	Change the engine oil.
  DATE JAN 2024 		



Instruments *(Continued)*





Helpful Information

Indication	Explanation	Remedy
	<p>Appears when communication between your vehicle and Honda SMART Key is interrupted after turning on the electrical system.</p>	<p>Refer to “When the Honda SMART Key System Does Not Operate Properly.” ➔P.190</p>
	<p>Appears when the battery of Honda SMART Key is weak.</p>	<p>Refer to “Replacing the Honda SMART Key Battery.” ➔P.176</p>

You can hide the pop-up information by pushing either the     sel switch while the pop-up information is displayed.

Warning Information

Indication	Explanation	Remedy
<p data-bbox="259 228 525 260">Warning indicator</p>  <p data-bbox="387 363 627 430">Low oil pressure indicator</p>	<p data-bbox="703 291 991 358">When the oil pressure in the engine is low.</p>	<p data-bbox="1038 270 1282 337">Refer to "Low Oil Pressure Indicator"</p> <p data-bbox="1038 348 1158 379">➔ P.182</p>
<p data-bbox="259 449 525 480">Warning indicator</p>  <p data-bbox="331 584 656 651">High coolant temperature indicator</p>	<p data-bbox="703 491 991 599">When the coolant temperature becomes high.</p>	<p data-bbox="1038 511 1333 542">Refer to "Overheating"</p> <p data-bbox="1038 553 1158 584">➔ P.181</p>

You can hide the pop-up information by pushing either the     sel switch while the pop-up information is displayed.

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

Refer to the "Instruments" about indicators appeared on the display: **➡P.29** , **➡P.81**

⇐ Left turn signal indicator

⇒ Right turn signal indicator



N Neutral indicator

Comes on when the transmission is in Neutral.

(ABS) ABS (Anti-lock Brake System) indicator

Comes on when the electrical system is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding: ➡P.184

🔧 PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the electrical system is turned on.

FO, GS, TH type If it comes on while engine is running: ➡P.183

ED, II ED, KO type If it comes on or flashes while engine is running:

➡P.183

Torque Control indicator

- Comes on when the electrical system is turned on. Goes off when your speed reaches approximately 5 km/h (3 mph) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding:  **P.185**



Honda SMART Key indicator

Comes on briefly when the electrical system is turned on.

When the Honda SMART Key Indicator Flashes:  **P.186**

Torque Control OFF Indicator


Comes on when the Torque Control is turned Off.

Steering lock indicator

Comes on briefly while the steering lock is activating.

Steering lock:  **P.89**

Switches

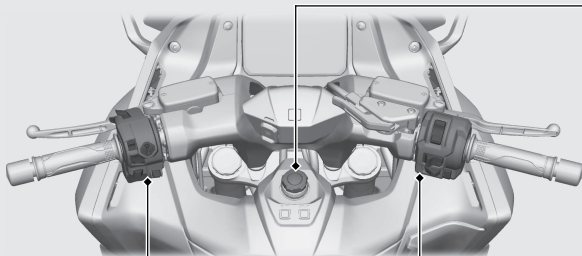


Left handlebar switch

➡ P.86

Right handlebar switch

➡ P.88



 **Answer back button**

This button is used to operate the answer back system.



Answer Back System: ➡ P.97

 **ON/OFF button**

This button is used to activate or deactivate the Honda SMART Key system, and also to confirm the activation status. ➡ P.91

Ignition Switch


Switches the electrical system on/off, locks the steering.

- ▶ Make sure that the Honda SMART Key is activated  **P.92** and enter the operating range.  **P.93**

Ignition switch knob ○/🔒 (Off/Lock)



Ignition | (On) switch

 


🔒 (Lock) Locks steering.  **P.89**



○ (Off) Turns engine off.



| (On) Turns electrical system on for starting/riding.


-  Push the ignition | (On) switch.
-  Turn the ignition switch knob ○/🔒 (Off/Lock) counterclockwise.
-  Turn and hold the ignition switch knob ○/🔒 (Off/Lock) counterclockwise.

Switches *(Continued)*




Left handlebar switches

Shift up switch (+)

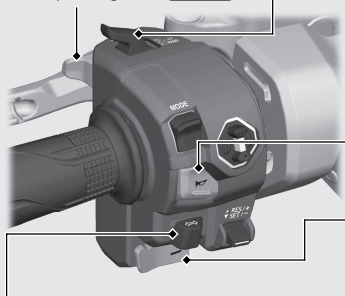To shift up the gear. ➡ P.118



Headlight dimmer/Passing light control switch

-  : High beam
-  : DRL auto or off (low beam) ➡ P.126
-  **PASS** : Flashes the high beam headlight.

Horn button


Shift down switch (-)

To shift down the gear. ➡ P.118

Turn signal switch


The turn signal will automatically stop when you complete the turn. (You can manually cancel the lights by pressing the switch in.) When used for a lane change, the turn signal will automatically stop in about 7 seconds or after riding 150 m (164 yards). In some cases, the timing at which the turn signal stops could be less or more. Always use the recommended tyres to ensure correct automatic cancellation operation.

To enable or disable the turn signal automatic cancellation: ➡ P.47 ➡ P.55

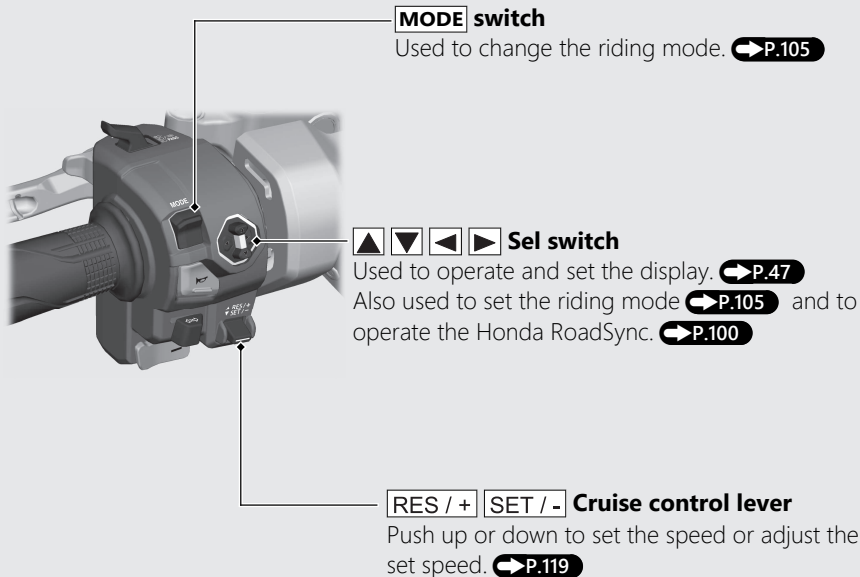



Switches *(Continued)*

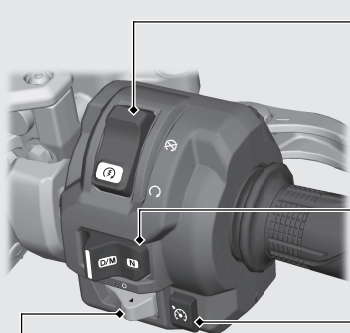Right handlebar switches




Engine stop switch/ Start button

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Stop) position to stop the engine.

N-D/M switch

To shift between Neutral and AT MODE or MT MODE.  **P.117**



Cruise control main switch

Press to activate the cruise control system.

 **P.119**

Hazard switch

Switchable when the electrical system is on. Can be turned to off regardless of whether the electrical system is on or off.

- ▶ The signals continue flashing with turn the electrical system is off after the hazard switch is on.


Steering Lock


Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.


- ▶ When using a U-shaped wheel lock or similar device, be careful not to damage the wheels.

Locking

- 1 Turn the ignition switch knob  (Off/Lock) counterclockwise to turn off the electrical system.
- 2 Turn the handlebar all the way to the left.

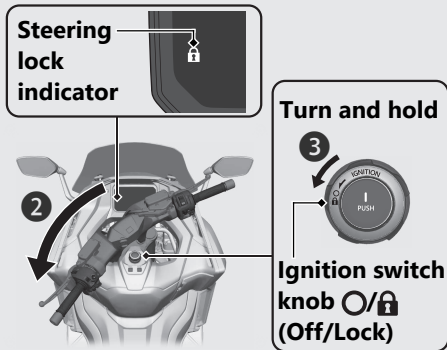



Switches *(Continued)*

③ Turn and hold the ignition switch knob  (Off/Lock) counterclockwise.


- ▶ The steering lock indicator comes on briefly and the steering is automatically locked.
- ▶ If the steering lock indicator blinks and the alarm sounds, the steering has not been locked completely because the steering was not positioned all the way to the left.

If this occurs, reposition the handlebar all the way to the left, then turn and hold the ignition switch counterclockwise (The steering can also be locked by positioning it all the way to the left while the alarm is sounding).

Unlocking

① Make sure that the Honda SMART Key is activated  and enter the operating range. 

② Push the ignition  (On) switch.

- ▶ The steering is unlocked automatically.
- ▶ If the steering lock indicator blinks, the steering is not unlocked because of excessive force on the steering. If this occurs, reposition the handlebar all the way to the left, then push the ignition  (On) switch. (The steering can also be unlocked by positioning it all the way to the left within seconds after the steering lock indicator start blinking).

Honda SMART Key System

The Honda SMART Key system allows you to operate the main switch without inserting a key into a keyhole.

The system runs a two-way authentication between the vehicle and the Honda SMART Key to verify if it is the registered Honda SMART Key.

The Honda SMART Key system uses low-intensity radio waves. It may affect medical equipment such as a cardiac pacemaker.

Honda SMART Key System *(Continued)*

Switching the Honda SMART Key System

To switch the Honda SMART Key system to activation or deactivation

Press the ON/OFF button until the Honda SMART Key LED changes colour.


To check the Honda SMART Key system status

Lightly press the ON/OFF button. The Honda SMART Key LED will show the status.

When the Honda SMART Key LED is:

Green: Honda SMART Key system authentication can be performed.

Red: Honda SMART Key system authentication cannot be performed.


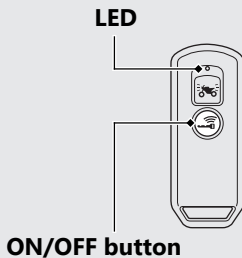


Operating Range

The Honda SMART Key system uses low-intensity radio waves. Therefore, the operating range may be wider or narrower, or the Honda SMART Key system may not work properly in the following situations:

- When the Honda SMART Key battery is depleted.
- When there are facilities nearby that generate strong radio waves or noise, such as TV towers, power stations, radio stations, or airports.
- When you carry the Honda SMART Key with a laptop or wireless communication device such as a radio or mobile phone.
- When the Honda SMART Key comes into contact with or is covered by metal objects.


The system can be operated when the Honda SMART Key is within the shaded area shown in the illustration.

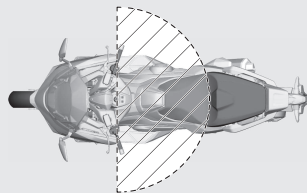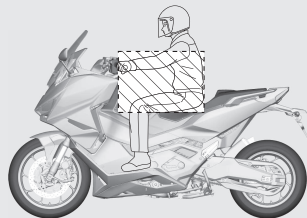

Honda SMART Key System *(Continued)*

Anyone can operate the ignition switch and start the engine if your Honda SMART Key is within operating range of your vehicle, even if you are on the other side of a wall or window. If you are away from your vehicle but your Honda SMART Key will still be within the system's operating range, deactivate the Honda SMART Key system.

To switching the Honda SMART Key system P.92

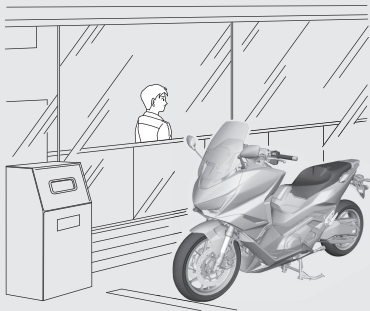

Anyone in possession of the Honda SMART Key can perform the following operations if the Honda SMART Key is within operating range:

- Starting the engine
- Unlocking the steering lock
- Unlocking the seat lock
- Unlocking the fuel lid

You should always keep the Honda SMART Key on your person after you get on and off the vehicle or while riding.

Do not place the Honda SMART Key in the any compartment.


If the electrical system is on, the vehicle can be operated even by a person who does not have a verified Honda SMART Key. Whenever you leave your vehicle, turn off the electrical system and lock the steering.

➡ P.89

Operating the Ignition Switch




To Activate the Electrical System

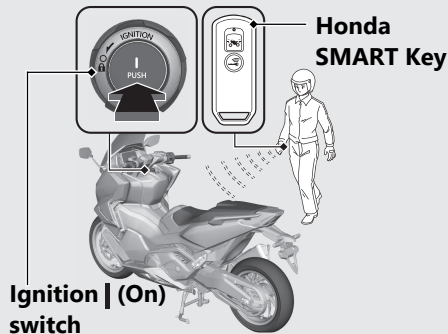- 1 Make sure that the Honda SMART Key is activated ➡ P.92 and enter the operating range for the vehicle. ➡ P.93
- 2 Push the ignition | (On) switch.
 - ▶ The electrical system activates and the engine can be started.



Honda SMART Key System *(Continued)*

To turn Off the Electrical System


- 1 Turn the ignition switch knob  (Off/Lock) counterclockwise
 - ▶ The windscreen moves to the lowest position automatically.
- 2 Leave the operating range with the Honda SMART Key  or switch the Honda SMART Key system to deactivation.


When the Honda SMART Key system does not work properly 

Answer Back System

The answer back system is a device to find the location of your vehicle. When the immobilizer is active and you press the answer back button on the Honda SMART Key with the electrical system is off, the turn signals light and buzzer rings, informing you of your vehicle's location.

The answer back system uses low-intensity radio waves. It may affect medical equipment such as a cardiac pacemaker.

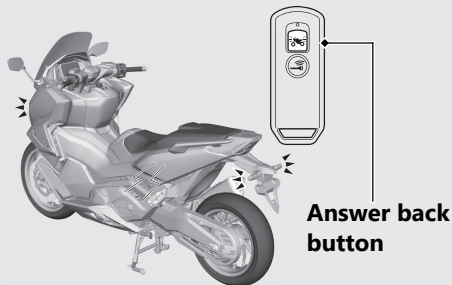

Operation

Press the answer back button on the Honda SMART Key.

- ▶ The answer back system will not function when the electrical system is on.

If the electrical system is left off for more than 10 days, the answer back system will no longer operate. When the system is active and the vehicle receives a signal from pressing answer back button, system activation will be extended for 10 days. To reset the system, turn on the electrical system once.

When the battery in the vehicle is weak, the answer back system may not function.


Answer Back System *(Continued)*

Adjusting the Answer Back Buzzer Sound Volume Level

You can select the buzzer sound volume from 3 levels.

- 1 Lock the steering. **→ P.89**
- 2 Make sure that the Honda SMART Key is activated. **→ P.92**
- 3 Press the answer back button on the Honda SMART Key 3 times within 1 minute while pushing and holding the ignition **I** (On) switch.
 - ▶ The Honda SMART Key indicator comes on.
- 4 Release the ignition **I** (On) switch.
 - ▶ The sound volume level changes each time the answer back button is pressed.

- 6 Wait for about 10 seconds until the Honda SMART Key indicator goes off. The sound volume level is set.
 - ▶ The sound volume level is also set by turn the ignition switch knob **O**/**I** (Off/Lock) counterclockwise before the Honda SMART Key indicator goes off.

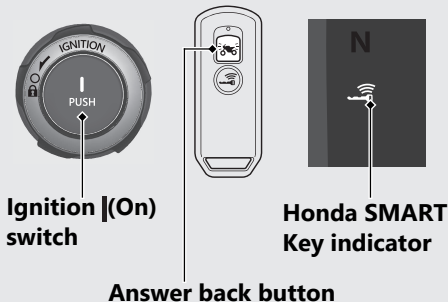


Changing the Answer Back Buzzer Sound Pattern

You can select the buzzer sound from 3 patterns.

- 1 Lock the steering. ➔ P.89
- 2 Make sure that the Honda SMART Key is activated. ➔ P.92
- 3 Press the answer back button on the Honda SMART Key 4 times within 1 minute while pushing and holding the ignition (On) switch.
 - ▶ The Honda SMART Key indicator comes on.
- 5 Press the answer back button to select from 3 buzzer sound patterns.
 - ▶ The sound pattern changes each time the answer back button is pressed.

- 6 Wait for about 10 seconds until the Honda SMART Key indicator goes off. The sound pattern is set.
 - ▶ The sound pattern is also set by turn the ignition switch knob ○/🔒 (Off/Lock) counterclockwise before the Honda SMART Key indicator goes off.

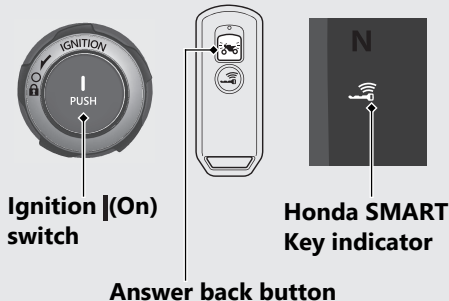

Honda RoadSync

ED, II ED, FO, KO, TH type

Connecting your smartphone with the vehicle and a *Bluetooth*® headset via *Bluetooth*® allows you to operate the smartphone by voice input from the headset. You can also use the system by operating switches on the handlebar.

- ▶ To use the system, you need to install the dedicated application on your smartphone beforehand and pair your smartphone with the vehicle and the headset.

For terms of service and information on how to install/operate the dedicated application, see the following URL:

<https://global.honda/voice-control-system/>



- ▶ The dedicated application is not available in some regions/countries. For available countries, see the above URL.

Communication range:

Within 1 meter radius from vehicle

Supported *Bluetooth*[®] version/profiles

<i>Bluetooth</i> [®] version	Bluetooth 4.2 or higher
<i>Bluetooth</i> [®] profiles	GATT (Generic Attribute Profile)
	HOGP (HID over GATT Profile)

Bluetooth[®] Wireless Technology

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motors Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

- Costs of network communication and communication equipment necessary for the use of this feature shall be borne by the user.
- You cannot pair two or more smartphones at once.
- Some smartphones may not be compatible with the feature.
- We shall not be liable for any damages or trouble in the use of smartphone.
- When unable to connect your smartphone to the vehicle, change the storage location of the smartphone.

Honda RoadSync *(Continued)*

The system itself has certain limitations. Therefore, you must verify the voice guidance and information in the meter provided by the system by carefully observing the roadway, signs, and signals, etc. If you are unsure, proceed with caution. Always use your own good judgement, and obey traffic laws while riding.

⚠ WARNING

Using the Honda RoadSync while riding can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

- Be especially cautious when crossing intersections, in heavy traffic. etc.
- Observe the roadway, signs, and signals, carefully.
- Obey traffic laws while riding.


Honda RoadSync Limitations

Changes in operating systems, hardware, software, and other technology integral to providing Honda RoadSync functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Honda RoadSync functionality and services.

Honda cannot and does not provide any warranty or guarantee of future Honda RoadSync performance or functionality.

Pairing your smartphone via Bluetooth®

- ① Select the BLUETOOTH PAIRING RESET menu. ➡ P.47 ➡ P.69

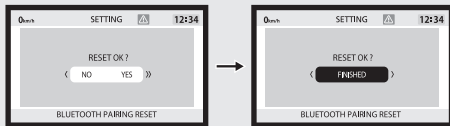

- ② When the "NO" is selected

 
Press the ◀ on the sel switch. The pairing record is maintained, and then the display returns to the upper level hierarchy.

When the "YES" is selected

Press and hold the ▶ on the sel switch. The pairing record is reset.

- ③ After resetting, complete pairing while the Bluetooth® indicator flashing by operated the application on your smartphone.

- ▶ When the display returns to the ordinary display, the Bluetooth® indicator is flashing.



**Bluetooth®
indicator**

- ▶ For operation of the application, follow the instruction of the application.
- ▶ Make a Bluetooth® pairing after stopping at a safe place.

Parking Brake

Parking Brake Lever

Be sure the parking brake is applied while parking and warming up the engine.

- ▶ Make sure the parking brake lever is released before riding.

To apply the parking brake

Push the parking brake lever to the right until it snaps into place



- ▶ The parking brake lock will not function if the parking brake is not adjusted properly.

➔ P.167

To release the parking brake

Push the parking brake lever back to the original position.

- ▶ Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is no drag on the rear wheel.

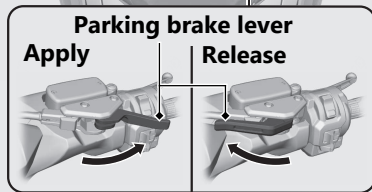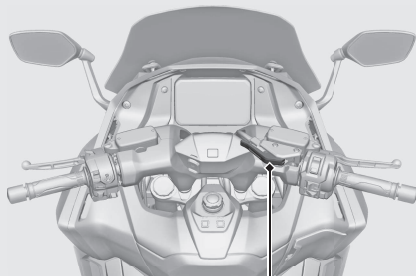

Riding mode

You can change the riding mode.

The riding mode consists of the following parameters.


The level of each parameter changes according to the selected riding mode.

P: Engine power output level

EB: Engine brake level

D: DCT mode

T: Torque control level

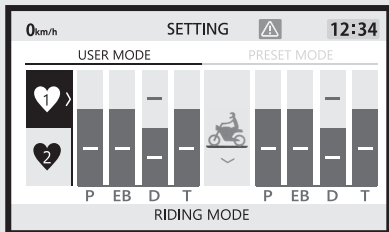

Riding mode has 5 modes.

Available riding modes: [STANDARD], [RAIN], [USER 1], [USER 2] and [SPORT]

STANDARD : Standard, all-round mode for a variety of situations.

RAIN : Good for stable riding on slippery surfaces such as rainy conditions.

SPORT : This mode is suitable for sports riding. You can feel the higher engine response compared to STANDARD.






Each initial setting level cannot be changed.

USER 1 and USER 2

Each initial setting level can be changed.

Riding mode *(Continued)*

Initial setting

	P level	EB level	D level	T level
SPORT 	3	3	4	1
STANDARD 	2	2	2	2
RAIN 	1	1	1	3
USER 1 	2 ^{*1}	2 ^{*1}	2 ^{*1}	2 ^{*1, 2}
USER 2 	2 ^{*1}	2 ^{*1}	2 ^{*1}	2 ^{*1, 2}

Notes:

*1 : Level can be changed.

*2 : If off is selected, the level will change to 2 the next time the ignition is turned on.

P level (Engine power output level)

P level has three setting levels.

Available setting range: 1 to 3

- ▶ Level 1 has the least power.
- ▶ Level 3 has the most power.

EB level (Engine brake level)

EB level has three setting levels.

Available setting range: 1 to 3

- ▶ Level 1 has the weakest engine braking effect.
- ▶ Level 3 has the strongest engine braking effect.

D level (DCT mode)

D level (DCT mode) has four setting levels.

Available setting range: 1 to 4

- ▶ Higher engine revolution can be used by increasing the level.
- ▶ Level 1 has the lowest engine revolution.
- ▶ Level 4 has the highest engine revolution.

T level (Torque control level)

T level has three setting levels or can be turned off.

Available setting range: 1 to 3, or Off



- ▶ Level 1 is the minimum Torque Control level.
- ▶ Level 3 is the maximum Torque Control level.
- ▶ Off deactivates the Torque Control.
- ▶ If the electrical system is turned from off to on while the T level is set to Off, the T level is automatically set to 2.

Riding mode *(Continued)*

Selecting the riding mode

- 1 Stop the vehicle.
- 2 Press the **MODE** switch with the throttle fully closed.


Each time the electrical system is turned on the riding mode returns to STANDARD.

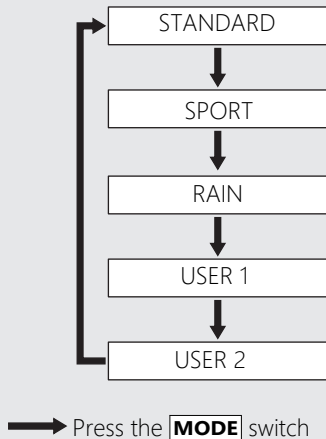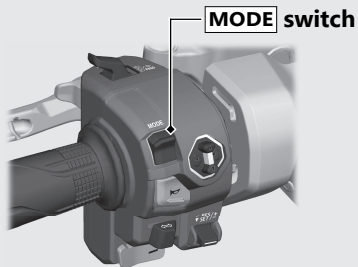

Setting the riding mode

You can change the P, EB, D and T levels on the USER of the riding mode.

- 1 Stop the vehicle.
- 2 Select the USER 1 or USER 2 riding mode.
➔P.108
- 3 Press and hold the **MODE** button until the parameter setting is displayed in the selectable area.

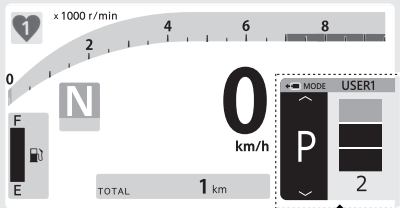





 

 





Parameter setting

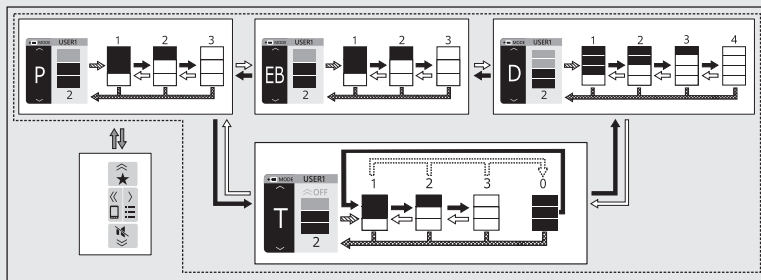- 4 Select the desired parameter and setting level.
 - ▶ To select the parameter, push the sel switch in the direction of ▲ or ▼.
 - ▶ Press ► on the sel switch to select the setting level using ▲ or ▼ on the sel switch.
 - ▶ T level can be changed to 0 (off) by pressing and holding ▲ on the sel switch while selecting the T parameter. To change between the AT MODE and MT MODE. ➔P.117

You can also change the levels on the USER of the riding mode in the setting mode of the instruments. ➔P.47 ➔P.52

Riding mode *(Continued)*




-  Press and hold the **MODE** switch
-  Push the sel switch in the direction of 
-  Push the sel switch in the direction of 
-  Press  on the sel switch
-  Press  on the sel switch
-  Press and hold  on the sel switch

Starting the Engine


Start your engine using the following procedure, regardless of whether the engine is cold or warm.

This vehicle is equipped with a Honda SMART Key system. Always keep Honda SMART Key on you when you ride the vehicle. ➔P.93

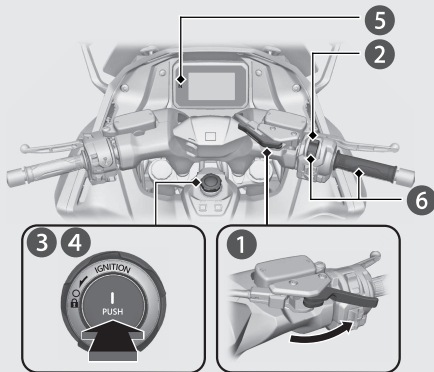

NOTICE

- If the engine does not start within 5 seconds, turn the electrical system off and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discoloration.


- 1 Check the parking brake.
- 2 Make sure the engine stop switch is in the  (Run) position.
- 3 Unlock the steering. ➔P.90
- 4 Activate the electrical system. ➔P.95
- 5 Shift the transmission to Neutral (**N** indicator to come on).
- 6 Press the start button with the throttle completely closed.
- 7 Make sure the parking brake lever is released before riding.

Starting the Engine *(Continued)*

If you cannot start the engine:

With the throttle slightly open (about 3 mm (0.1 in), without freeplay), press the start button.

About 3 mm (0.1 in), without freeplay

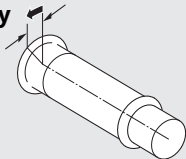

If the engine does not start:

- ① Open the throttle fully and press the start button for 5 seconds.
 - ▶ The engine will not start at this time. (When the throttle is fully open, the engine will not start when the start button is pressed.) Release the throttle and start button after 5 seconds and proceed to step ②.
- ② Repeat the normal starting procedure.

- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying steps ① & ② again.

| If Engine Will Not Start ➔ P.180

When you stop the engine

- ① To stop the engine, shift the transmission to Neutral (**N** indicator comes on).
 - ▶ If you turn the electrical system off when the vehicle is in gear, the engine will shut off with the clutch disengaged.
- ② Turn the electrical system off.
- ③ Set the parking brake when you park the vehicle. ➔ **P.104**

Shifting Gears

Your vehicle is equipped with an automatically controlled 6-speed transmission. It can be shifted automatically (by AT MODE) or manually (by MT MODE).


Dual Clutch Transmission

In order to respond to rider demands in a broad range of situations, the transmission is equipped with two operating modes, AT MODE (D) (automatic shift for regular operation); and MT MODE (M) (for 6-speed manual operation), which delivers the same shift feel as a manual transmission.

- ▶ Always use the recommended tyres and sprockets to ensure correct Dual Clutch Transmission operation.

The Dual Clutch Transmission system runs a self check immediately after starting the engine.

You cannot change AT MODE (D) for a few seconds.

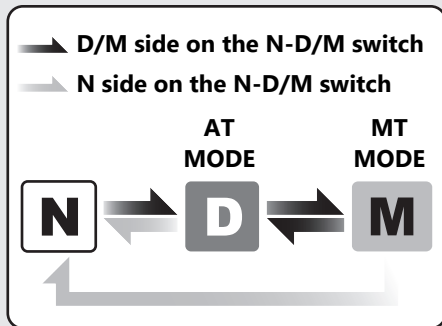

Neutral (N): Neutral is selected automatically when you turn the electrical system on.

If neutral is not selected when the electrical system is turned on.

- ▶ Turn the electrical system off and then on again.
- ▶ If neutral is still not selected after turning the electrical system off and then on again.

➡ **P.187**

You may hear (click) noises when the transmission shifts to Neutral (N). This is normal.

When you can change between N and D

- ▶ Vehicle is stopped and the engine is idling.
- ▶ Throttle is completely closed. It is not possible to change from Neutral to D mode while the throttle is applied.
- ▶ You cannot change between N and D mode while the wheels are rotating.
- ▶ Side stand is raised.

NOTICE

To prevent clutch damage, do not use the throttle to keep the vehicle stopped uphill.

Shifting Gears *(Continued)*

AT MODE: In this mode, the gears are shifted automatically according to your riding conditions.

And also using the shift up switch (+) or shift down switch (-), you can temporarily shift up or down. These switches are convenient when you want to temporarily down-shift in front of a curve, etc. ➡ **P.118**

You can change the D level when you need more power in AT MODE, such as when overtaking, climbing hills, pulling away. Higher engine RPM can be used by increasing the level.

D level can be changed only when riding mode is USER.

To change the D level : ➡ **P.47** ➡ **P.52**

➡ **P.109**

Riding mode : ➡ **P.105**

MT MODE (6-speed manual operation):

In this mode, you can choose between 6 gears.

Changing between Neutral and AT MODE/MT MODE

Changing from Neutral (N) to AT MODE



Press the D/M side on the N-D/M switch (①).
"1" is shown (②) in the gear position indicator and first gear is selected.

Changing between AT MODE and MT MODE

Press the D/M side on the N-D/M switch (③).
The M indicator come on (④) while MT MODE is selected.

Changing from AT or MT MODE to Neutral

Press N side on the N-D/M switch (⑤).
"N" is shown (⑥) in the gear position indicator.

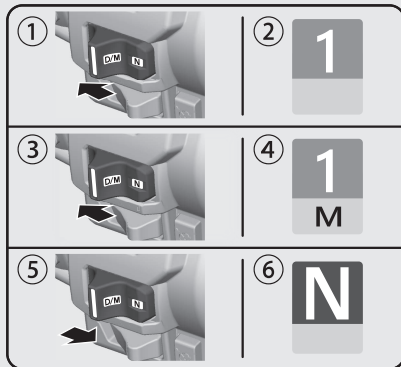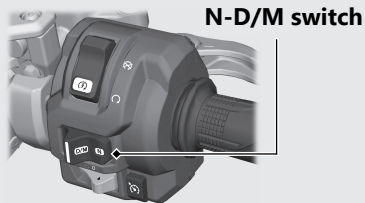

Shifting Gears *(Continued)*

Riding in MT MODE

Shift up and down with the shift up switch (+) and shift down switch (-).

The selected gear is shown on the gear position indicator.

- ▶ If the MT MODE is selected, the transmission does not shift up automatically. Do not allow the engine revs to go into the red zone.
- ▶ The transmission automatically shifts down when you slow down, even in MT MODE.
- ▶ You will start from 1st gear even if MT MODE is selected.

Gear shift operation

Shifting Up:


Press the shift up switch (+) (7).

Shifting Down:

Press the shift down switch (-) (8).

You cannot continue shifting gear by keeping the shift switch pressed.

To continue shifting gear release the switch and press it again.

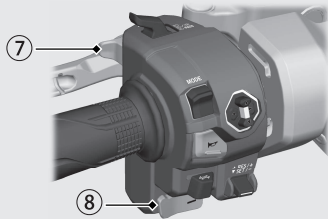

Shift Limit

You cannot downshift if the engine will exceed the rev limit.

Cruise Control

The cruise control system allows you to maintain a steady speed within a specified range.

The available speed setting range and operating gears are listed below:

Available Speed setting range	50 – 160 km/h (30 - 100 mph)
Operating gear	From 3rd to 6th gear

When cruise control is on, your speed will still vary slightly, particularly when going up and down hills.

Cruise control is intended for use only on straight, uncongested highways. Do not use cruise control on city streets, winding roads, during bad weather, or at any other time when you need total control of the throttle.


WARNING

Improper use of the cruise control can lead to a crash in which you could be seriously hurt or killed.


Use the cruise control only when travelling on open highways in good weather.

Cruise Control *(Continued)*

To Set Cruise Control


- Make sure the travelling speed and operating gear are conformed to the requirements of the system.
 - Any speed other than the available range will not be memorized.
- Press the  cruise control main switch (The cruise control display will be appeared).
- Accelerate to the desired speed.
- Push the cruise control lever to **SET / -** side (The cruise control main indicator colour will be changed).
 - The current travelling speed is memorized, and then the set speed is displayed on the display.

Cruise control display

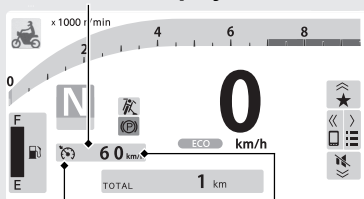

Cruise control main indicator

Cruise control set speed

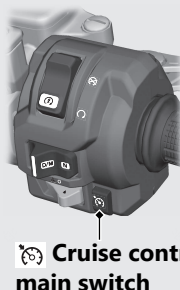

| To Change the Set Speed To Fine Tune the Set Speed

- 1 To increase the set speed: tap the cruise control lever to **RES / +** side.
To decrease the set speed: tap the cruise control lever to **SET / -** side.
- 2 The set speed is displayed in the display.

Each quick tap (brief push and release) on either side will change your speed by 1 km/h or 1 mph (depending on the mileage meter set unit).

Any speed other than the possible setting range will not be indicated (stops at the upper or lower limit of the available speed setting range).

To Change the Set Speed Continuously

- To increase the set speed: push and hold the cruise control lever to **RES / +** side.

The system will accelerate your vehicle automatically. When you reach the desired speed, release the cruise control lever.

If the cruise control lever is pushed and held to **RES / +** side continuously, the set speed indicated in the display will stop at the upper limit of the available speed setting range.

- To decrease speed: push and hold the cruise control lever to **SET / -** side. The system will automatically slow your vehicle. When you reach the desired speed, release the cruise control lever. If the cruise control lever is pushed and held to **SET / -** side continuously, the set speed indicated in the display will stop at the lower limit of the available speed setting range.

Cruise Control *(Continued)*

To Manually Increase the Set Speed

- ① Use the throttle to accelerate until you reach the desired speed.
- ② Push and release the cruise control lever to **SET / -** side.
 - ▶ Cruise control set speed is set to the travelling speed when cruise control lever is released.

To Manually Increase Vehicle Speed




- ① Use the throttle in the normal manner to accelerate.
- ② To return to the set speed, close the throttle and coast without applying the brakes.
 - ▶ The cruise system will maintain the speed you previously set.

To Cancel Cruise Control

To Disengage the System

- Press the cruise control main switch (The cruise control display disappears, and the set speed will be erased from memory).

To Temporarily Disengage the System

- 1 Perform one of the following operations to disengage the system temporarily (The colour of  cruise control main indicator temporarily goes off but the set speed remains in memory).
 - Apply the brake lever or pedal.
 - Rotate the throttle grip past the automatically closed position in the deceleration direction.
- 2 To resume cruise control:
 - If you are still travelling over 50 km/h (30 mph), push and release the cruise control lever to  side.
 - If you are travelling under 50 km/h (30 mph), use the throttle to increase road speed above 50 km/h (30 mph), and then push and release the cruise control lever to  side.

Emergency Stop Signal

Emergency stop signal activates when the system detects hard braking about 50 km/h (31 mph) or above to alert drivers behind you about sudden braking by rapidly flashing both turn signal lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.



The emergency stop signal stops operating when:

- You release the brakes.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.
- You press the hazard switch.

When the system activates:



1 Hard braking

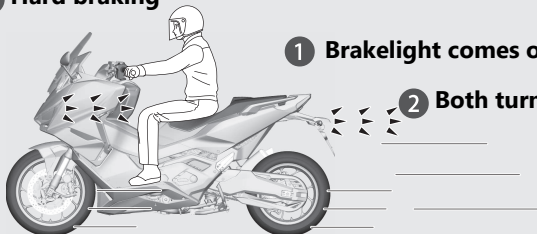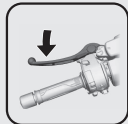




1 Brakelight comes on

2 Both turn signals flash


2 Both turn signal indicators blink

- ▶ The emergency stop signal is not a system that can prevent a possible rear-end collision caused by your hard braking. It is always recommended to avoid hard braking unless it is absolutely necessary.
- ▶ The emergency stop signal does not activate while the hazard switch is on.
- ▶ If the ABS stops working for a certain period during braking, the emergency stop signal may not activate at all.

DRL (Daytime Running Light)

When the headlight dimmer/passing light control switch is turned to the  position and DRL is set to  (Auto)  , the headlights and DRL are switched automatically according to the ambient brightness.

When it gets brighter, DRL lights up, and when it gets dark, low beam lights up and DRL decreases to the brightness of the position light.

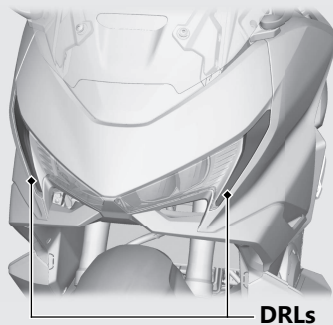

Refuelling



Fuel type: Unleaded petrol only



Fuel octane number: Your vehicle is designed to use Research Octane Number (RON) 91 or higher.

Tank capacity: 13.2 L (3.49 US gal, 2.90 Imp gal)

Refuelling and Fuel Guidelines P.15

Opening the Fuel Fill Cap

- 1 Make sure that the Honda SMART Key is activated  P.92 and enter the operating range for the vehicle.  P.93
- 2 Push the fuel lid opener switch.
- 3 Turn the fuel fill cap counterclockwise until it stops and remove the cap.

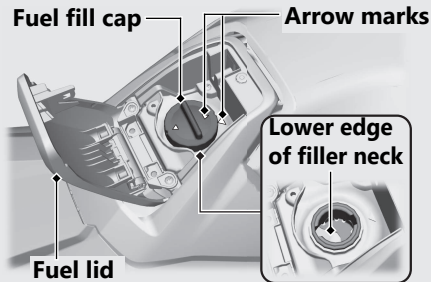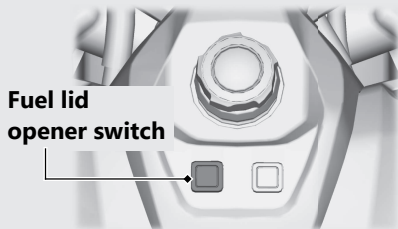

Do not fill with fuel above the lower edge of the filler neck.

Refuelling *(Continued)*

Closing the Fuel Fill Cap

- ① Install and tighten the fuel fill cap firmly by turning it clockwise.
 - ▶ Make sure that the arrow marks on the cap and fuel tank are aligned.
- ② Close the fuel lid.

WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flames away.
- Only handle fuel outdoors.
- Wipe up spills immediately.

USB Socket

Your vehicle is equipped with the USB socket (for USB Type-C only).

The USB socket is located on the handle bar.

This socket is for battery charge only.


Use USB devices at your own risk. In no event shall Honda be liable for any damage to your USB device when in use.

Only USB devices within the following specifications can be connected.

Open the cover to access the socket.

Rated capacity is

15 W (5 V, 3.0 A).

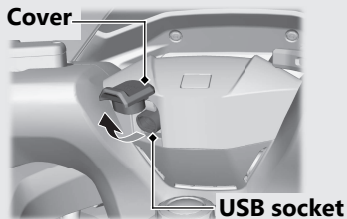



- ▶ To prevent the battery from becoming weak (or dead), keep the engine running while drawing current from the socket.
- ▶ To prevent entry of foreign matter into the socket, be sure to close the cover.
- ▶ Carefully secure all connected devices, as vibration may cause damage to them or they could shift unexpectedly.

NOTICE

- Using any heat-generating USB devices or improperly rated USB devices can damage the socket.
- Do not use the USB socket in wet conditions, when or while washing or any other wet conditions as these will damage the USB socket.
- Do not allow the USB cable to become pinched or trapped.
- Do not allow the USB cable to interfere with the steering or controls.

Storage Equipment

Luggage Box

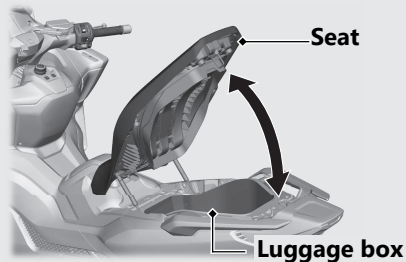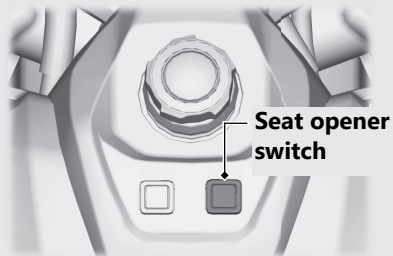

Open

- 1 Make sure that the Honda SMART Key is activated **➔P.92** and enter the operating range for the vehicle. **➔P.93**
- 2 Push the seat opener switch.
- 3 Pull up the rear of the seat.

Close

Push down the rear of the seat until it locks in place.


- ▶ Make sure that the tab is locked securely in position to pull up the rear of the seat lightly.
- ▶ Take care not to store the deactivated Honda SMART Key and emergency key in the any compartment.

Never exceed the maximum weight limit.

Maximum Weight: 5.0 kg (11.0 lb)

- ▶ Do not store any items that are flammable or susceptible to heat damage.
- ▶ Do not store valuables or fragile articles.

A helmet can be stored in the luggage box.
Set in the front of the helmet upward.

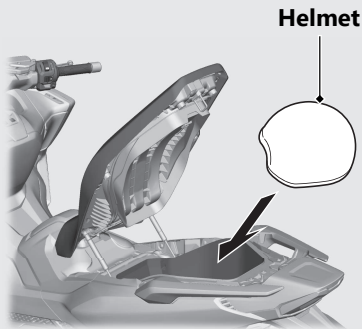


- ▶ Some helmets may not fit in the compartment due to their size or design.

Storage Equipment *(Continued)*


Tool Kit

The tool kit is stored in the luggage box by the rubber strap.

Rubber strap

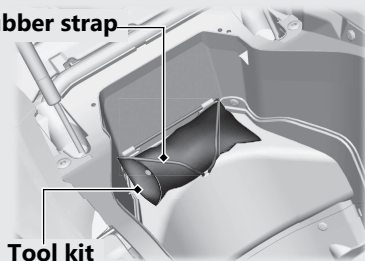


Tool kit

Opening the seat  P.130


Document Bag

The document bag is stored reverse side of the seat.

Rubber strap

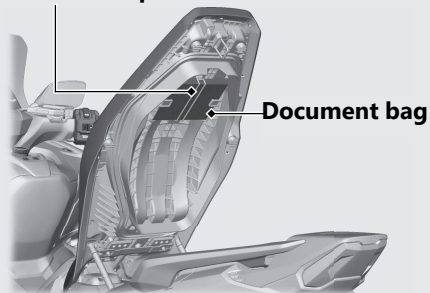


Document bag

Opening the seat  P.130

Helmet Holder

The helmet holder is located under the seat.
A helmet set wire is in the tool kit.

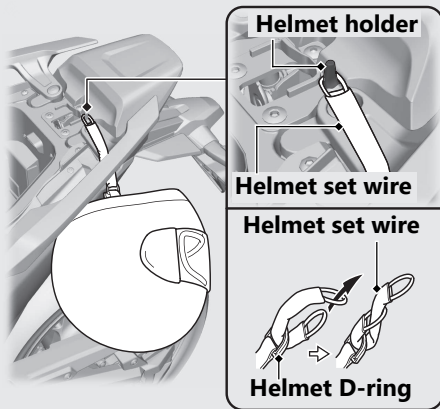

► Use the helmet holder only when parked.

Opening the seat ➔ P.130

⚠WARNING

Riding with a helmet attached to the holder can interfere with your ability to safely operate the vehicle and could lead to a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

Storage Equipment *(Continued)*

Fairing Pocket

Never exceed the maximum weight limit.

Maximum Weight: 0.3 kg (0.66 lb)


Open

To open the fairing pocket, pull the fairing pocket lid.

Close

Push the fairing pocket lid until it is firmly closed.

- ▶ Do not store valuables or fragile articles.
- ▶ Make sure the fairing pocket is closed before riding.
- ▶ Be careful not to flood this area when washing your vehicle.

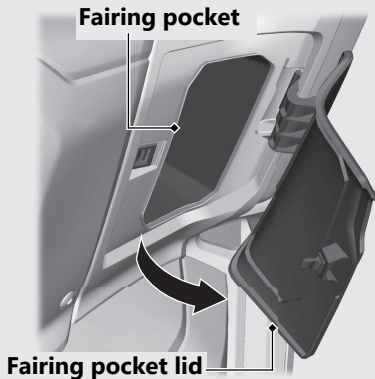

Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

Importance of Maintenance	P. 136	Brakes	P. 165
Maintenance Schedule	P. 137	Side Stand	P. 168
Maintenance Fundamentals	P. 142	Drive Chain	P. 169
Tools	P. 154	Throttle	P. 172
Removing & Installing Body		Other Adjustments	P. 173
Components	P. 155	Adjusting the Brake Lever	P. 173
Battery	P. 155	Adjusting the Rear Suspension.....	P. 175
Clip.....	P. 156	Other Replacement	P. 176
Front Lower Cover	P. 157	Replacing the Honda SMART Key Battery ..	P. 176
Harness Band Clip.....	P. 158		
Maintenance Lid	P. 159		
Left Side Cover	P. 160		
Engine Oil	P. 161		
Coolant	P. 163		

Importance of Maintenance

Importance of Maintenance

Keeping your vehicle well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your vehicle before each ride and perform the periodic checks specified in the Maintenance Schedule.

➤ P. 137

⚠ WARNING

Improperly maintaining your vehicle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Maintenance Safety

Always read the maintenance instructions before you begin each task and make sure that you have the tools, parts, and skills required. We cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.

- Stop the engine and turn the electrical system off.
- Place your vehicle on a firm, level surface using the side stand, centre stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.

Maintenance Schedule

The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance, and proper emission control.

Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your vehicle is properly maintained.

Make sure that whomever performs the maintenance completes this record.

All scheduled maintenance is considered a normal owner operating cost and will be charged to you by your dealer. Retain all receipts. If you sell the vehicle, these receipts should be transferred with the vehicle to the new owner.

Honda recommends that your dealer should road test your vehicle after each periodic maintenance is carried out.

Maintenance Schedule

ED, II ED, FO, KO type

Items	Pre-ride Check ☑ P. 142	Frequency*1					Annual Check	Regular Replace	Refer to page	
		x 1,000 km	1	12	24	36				48
		x 1,000 mi	0.6	8	16	24				32
Fuel Line	🔧			I	I	I	I	I		-
Fuel Level		I								-
Throttle Operation	🔧	I		I	I	I	I	I		172
Air Cleaner *2	🔧				R		R			-
Crankcase Breather*3				C	C	C	C			-
Spark Plug	🔧				I		R			-
Valve Clearance	🔧				I		I			-
Engine Oil		I	R	R	R	R	R	R	R	161
Engine Oil Filter			R		R		R			-
Clutch Oil Filter			R		R		R			-
Engine Idle Speed	🔧			I	I	I	I	I		-
Radiator Coolant *4		I		I	I	I	I	I	3 Years	163
Cooling System	🔧			I	I	I	I	I		-
Evaporative Emission Control System	🔧				I		I			-

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
- 🔧 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L : Lubricate
- R : Replace
- C : Clean

Items	Pre-ride Check P. 142	Frequency*1					Annual Check	Regular Replace	Refer to page	
		x 1,000 km	1	12	24	36				48
		x 1,000 mi	0.6	8	16	24				32
Drive Chain	I	Every 1,000 km (600 mi): I L							169	
Drive Chain Slider			I	I	I	I			171	
Brake Fluid *4	I		I	I	I	I	I	2 Years	165	
Brake Pads Wear	I		I	I	I	I	I		166	
Brake System			I	I	I	I	I		142	
Brake Lock Operation	⚙		I	I	I	I			167	
Headlight Aim			I	I	I	I	I		-	
Lights/Horn	I								-	
Engine Stop Switch	I								-	
Side Stand	I		I	I	I	I	I		168	
Suspension	⚙		I	I	I	I	I		-	
Nuts, Bolts, Fasteners	⚙		I	I	I	I	I		-	
Wheels/Tyres	⚙	I		I	I	I	I		151	
Steering Head Bearings	⚙		I	I	I	I	I		-	

Notes:

*1: At higher odometer readings, repeat at the frequency interval established here.

*2: Service more frequently when riding in unusually wet or dusty areas.

*3: Service more frequently when riding in rain or at full throttle.

*4: Replacement requires mechanical skill.

Maintenance Schedule

GS, TH type

Items	Pre-ride Check ☒ P. 142	Frequency *1								Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36			
		× 1,000 mi	0.6	4	8	12	16	20	24			
Fuel Line	🔧				I		I		I	I		-
Fuel Level		I										-
Throttle Operation	🔧	I			I		I		I	I		172
Air Cleaner *2	🔧					R			R			-
Crankcase Breather *3				C	C	C	C	C	C			-
Spark Plug	🔧	Every 24,000 km (16,000 mi): I, Every 48,000 km (32,000 mi): R										-
Valve Clearance	🔧						I					-
Engine Oil		I	R		R		R		R	R		161
Engine Oil Filter			R				R					-
Clutch Oil Filter			R				R					-
Engine Idle Speed	🔧				I		I		I	I		-
Radiator Coolant *4		I			I		I		I	I	3 Years	163
Cooling System	🔧				I		I		I	I		-
Evaporative Emission Control System	🔧						I					-

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.
- 🔧 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- L : Lubricate
- C : Clean

Items	Pre-ride Check P. 142	Frequency *1								Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36			
		× 1,000 mi	0.6	4	8	12	16	20	24			
Drive Chain	I			Every 1,000 km (600 mi): I L								169
Drive Chain Slider					I		I		I			171
Brake Fluid *4	I			I	I	I	I	I	I	I	2 Years	165
Brake Pads Wear	I			I	I	I	I	I	I	I		166
Brake System					I		I		I	I		142
Brake Lock Operation	W			I	I	I	I	I	I	I		167
Headlight Aim					I		I		I	I		-
Lights/Horn	I											-
Engine Stop Switch	I											-
Side Stand	I				I		I		I	I		168
Suspension	W				I		I		I	I		-
Nuts, Bolts, Fasteners	W				I		I		I	I		-
Wheels/Tyres	W	I			I		I		I	I		151
Steering Head Bearings	W				I		I		I	I		-

Notes:

*1: At higher odometer reading, repeat at the frequency interval established here.

*2: Service more frequently when riding in unusually wet or dusty areas.

*3: Service more frequently when riding in rain or at full throttle.

*4: Replacement requires mechanical skill.

Pre-ride Inspection

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tyre, can be a major inconvenience.

Check the following items before you get on your vehicle:

- Fuel level - Fill fuel tank when necessary ➤ P. 127
- Throttle - Check for smooth opening and full closing in all steering positions ➤ P. 172
- Engine oil level - Add engine oil if necessary. Check for leaks ➤ P. 161
- Coolant level - Add coolant if required. Check for leaks ➤ P. 163

- Drive chain - Check condition and slack, adjust and lubricate if necessary ➤ P. 169
- Brakes - Check operation;
Front and Rear: check brake fluid level and pads wear ➤ P. 165, ➤ P. 166
- Lights and horn - Check that lights, indicators and horn function properly
- Engine stop switch - Check for proper function ➤ P. 84
- Side stand ignition cut-off system - Check for proper function ➤ P. 168
- Wheels and tyres - Check condition, air pressure and adjust if necessary ➤ P. 151


Replacing Parts

Always use Honda Genuine Parts or their equivalents to ensure reliability and safety.

ED, II ED, KO type

When ordering coloured components, specify the model name, colour, and code mentioned on the colour label.

The colour label is attached to the luggage box under the seat. ➤ P. 130

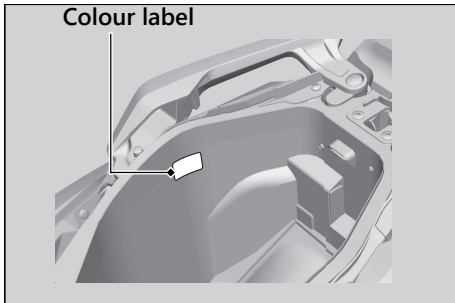

⚠WARNING

Installing non-Honda parts may make your vehicle unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your vehicle.

Battery

Your vehicle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.



This symbol on the battery means that this product must not be treated as household waste.

NOTICE

An improperly disposed of battery can be harmful to the environment and human health. Always confirm local regulations for proper battery disposal instruction.

What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
 - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
 - ▶ Remove affected clothing and wash your skin thoroughly using water.
- Electrolyte splashes into your mouth:
 - ▶ Rinse mouth thoroughly with water, and do not swallow.

⚠ WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.


Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.

Cleaning the Battery Terminals

1. Remove the battery. ➤ P. 155
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.

Maintenance Fundamentals

3. If the terminals are heavily corroded, clean and polish the terminals with a wire brush or sandpaper. Wear safety glasses.

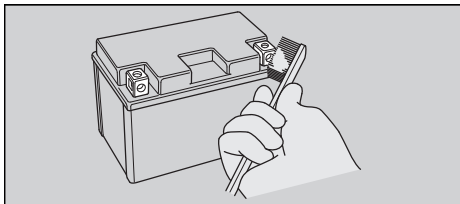

4. After cleaning, reinstall the battery.

The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.

NOTICE


Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

Fuses

Fuses protect the electrical circuits on your vehicle. If something electrical on your vehicle stops working, check for and replace any blown fuses. ➤ P. 203

Inspecting and Replacing Fuses

Turn off the electrical system to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ➤ P. 234

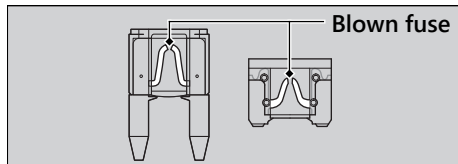

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your vehicle inspected by your dealer.

Engine Oil

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.


Selecting the Engine Oil

For recommended engine oil, see "Specifications." P. 233


If you use non-Honda engine oil, check the label to make sure that the oil satisfies all of the following standards:

- JASO T 903 standard^{*1}: MA
- SAE standard^{*2}: 10W-30
- API classification^{*3}: SJ or higher

- ^{*1}. The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MA classification.

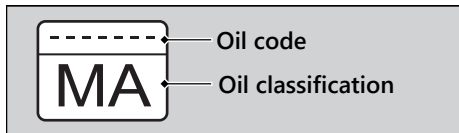

- ^{*2}. The SAE standard grades oils by their viscosity.
- ^{*3}. The API classification specifies the quality and performance rating of engine oils. Use SJ or higher oils, excluding oils marked as "Energy Conserving" or "Resource Conserving" on the circular API service symbol.

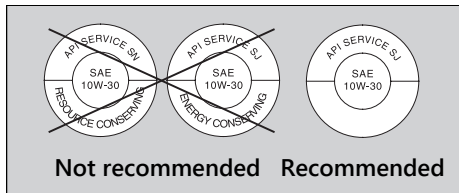

Brake Fluid

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

NOTICE

Brake fluid can damage plastic and painted surfaces.

Wipe up spills immediately and wash thoroughly.

Recommended brake fluid:

Honda DOT 4 Brake Fluid or equivalent

Drive Chain

The drive chain must be inspected and lubricated regularly. Inspect the chain more frequently if you often ride on bad roads, ride at high speed, or ride with repeated fast acceleration. ➤ P. 169

If the chain does not move smoothly, makes strange noises, has damaged rollers, has loose pins, has missing O-rings, or has kinks, have the chain inspected by your dealer.

Also inspect the drive sprocket and driven sprocket. If either has worn or damaged teeth, have the sprocket replaced by your dealer.



**Normal
(GOOD)**



**Worn
(REPLACE)**



**Damaged
(REPLACE)**

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.


Cleaning and Lubricating

After inspecting the slack, clean the chain and sprockets while rotating the rear wheel. Use a dry cloth with chain cleaner designed specifically for O-ring chains, or neutral detergent. Use a soft brush if the chain is dirty.

After cleaning, wipe dry and lubricate with the recommended lubricant.

Recommended lubricant:

Drive chain lubricant designed specifically for O-ring chains
If not available, use SAE 80 or 90 gear oil.

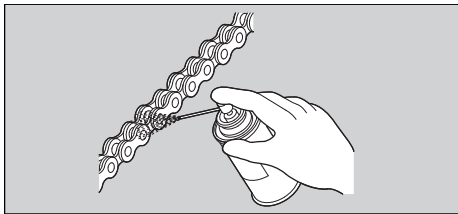

Do not use a steam cleaner, a high pressure cleaner, a wire brush, volatile solvent such as petrol and benzene, abrasive cleaner, chain cleaner or lubricant NOT designed specifically for O-ring chains as these can damage the rubber O-ring seals.

Avoid getting lubricant on the brakes or tyres.
Avoid applying excess chain lubricant to prevent spray onto your clothes and the vehicle.

Recommended Coolant

Except Singapore, Hong Kong, Taiwan, Thailand
Pro Honda HP Coolant is a pre-mixed solution of antifreeze and distilled water.

Concentration:

50% antifreeze and 50% distilled water

A concentration of antifreeze below 40% will not provide proper corrosion and cold temperature protection.

A concentration of up to 60% will provide better protection in colder climates.

Singapore, Hong Kong, Taiwan, Thailand

Use only genuine HONDA PRE-MIX COOLANT without diluting with water. Genuine HONDA PRE-MIX COOLANT is excellent at preventing corrosion and overheating.

The coolant should be inspected and replaced properly by following the maintenance schedule. ➤ P. 137

NOTICE

Using coolant not specified for aluminium engines or tap/mineral water can cause corrosion.

Crankcase Breather

Service more frequently when riding in rain, at full throttle, or after the vehicle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.


If the drain tube overflows, the air filter may become contaminated with engine oil, causing poor engine performance.

Tyres (Inspecting/Replacing)


Checking the Air Pressure

Visually inspect your tyres and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tyres look low. Always check air pressure when your tyres are cold.

Even if the direction of the valve stem is changed, do not return it to the original position. Have your vehicle inspected by your dealer.

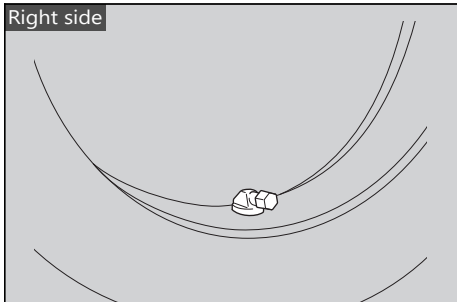


Inspecting for Damage

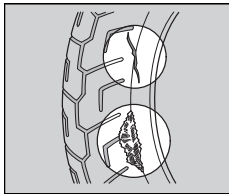

Inspect the tyres for cuts, slits, or cracks that expose fabric or cords, or nails or other foreign objects embedded in the side of the tyre or the tread.

Also inspect for any unusual bumps or bulges in the side walls of the tyres.


Inspecting for Abnormal Wear

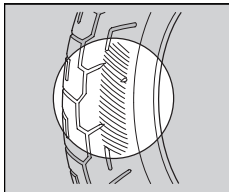

Inspect the tyres for signs of abnormal wear on the contact surface.

Inspecting Tread Depth

Inspect the tread wear indicators. If they become visible, replace the tyres immediately. For safe riding, you should replace the tyres when the minimum tread depth is reached.

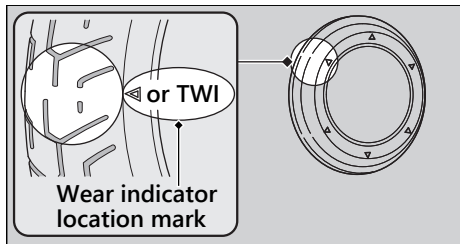

⚠️ WARNING

Riding on tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Germany

German law prohibits use of tyres whose tread depth is less than 1.6 mm.

Have your tyres replaced by your dealer. For recommended tyres, air pressure, and minimum tread depth, see "Specifications."

➤ P. 233

Follow these guidelines whenever you replace tyres:

- Use the recommended tyres or their equivalents of the same size, construction, speed rating, and load range.
- Have the wheel balanced with Honda Genuine balance weights or equivalent after the tyre is installed.
- Do not install a tube inside a tubeless tyre on this vehicle. Excessive heat build-up can cause the tube to burst.

- Use only tubeless tyres on this vehicle. The rims are designed for tubeless tyres, and during hard acceleration or braking, a tube-type tyre could slip on the rim and cause the tyre to rapidly deflate.

WARNING

Installing improper tyres on your vehicle can adversely affect handling and stability, and can cause a crash in which you can be seriously hurt or killed.


Always use the size and type of tyres recommended in this owner's manual.

The tool kit is stored under the seat. ➔ P. 130

You can perform some roadside repairs, minor adjustments and parts replacement with the provided tools.

- 10 x 14 mm Open end wrench
- 12 x 14 mm Open end wrench
- 5 mm Hex wrench
- Screwdriver handle
- Standard/Phillips screwdriver
- Pin spanner
- Extension bar
- Fuse puller
- EM mode coupler
- Helmet set wire

Battery

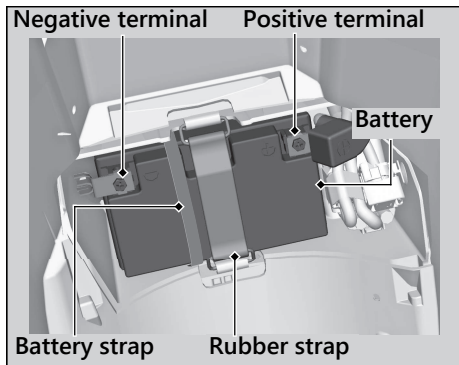

Removal

Make sure the electrical system is turned off.

1. Remove the maintenance lid. ➤ P. 159
2. Unhook the rubber strap.
3. Disconnect the negative \ominus terminal from the battery.

4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery, taking care not to drop the terminal nuts.
 - ▶ Remove the battery by pulling the battery strap with one hand while supporting the battery with the other.

Installation

 
Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➤ P. 65
For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 144
"Battery Goes Dead." ➤ P. 202

Clip

Removal

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.




Installation

1. Push the bottom of the centre pin.



2. Insert the clip into the hole.
3. Press down on the centre pin to lock the clip.

Front Lower Cover

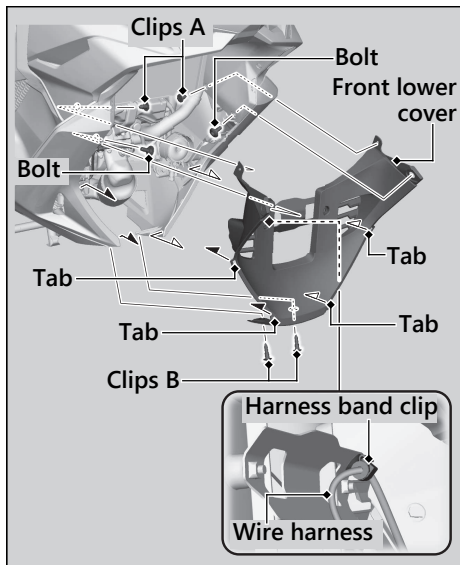

Removal

1. Remove the clips A and clips B. ► P. 156
2. Remove the bolts.
3. Remove the tabs.
4. Remove the wire harness from the harness band clip (► P. 158), then remove the front lower cover.


Installation

Install the parts in the reverse order of removal.

Harness Band Clip

Removal


Pull the tab to open the harness band clip.

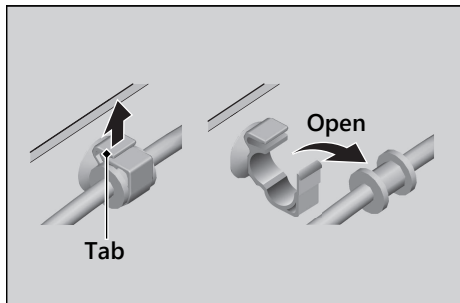

Installation

Install the tab until it clicks.

Maintenance Lid

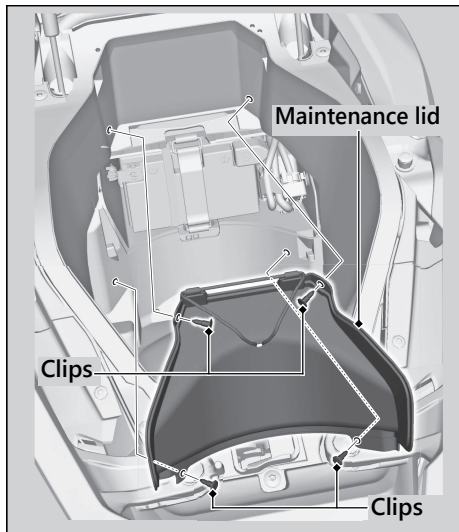


Removal

1. Open the seat. ► P. 130
2. Remove the tool kit. ► P. 132
3. Remove the clips (► P. 156) and maintenance lid.

Installation

Install the parts in the reverse order of removal.

Left Side Cover

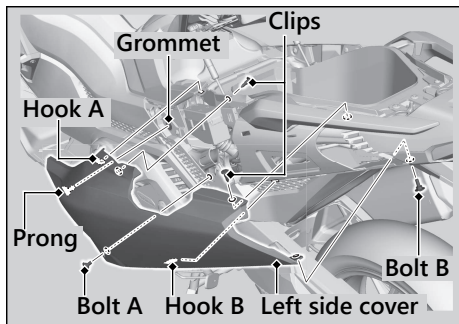

Removal


1. Open the seat. ► P. 130
2. Remove the clips. ► P. 156
3. Remove the bolt A and bolt B.
4. Remove the hook A and hook B.
5. Remove the prong from the grommet, then remove the left side cover.

Installation

Install the parts in the reverse order of removal.

Checking the Engine Oil

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn off the electrical system and wait for 2 to 3 minutes.
3. Place your vehicle on its centre stand on a firm, level surface.
4. Remove the oil fill cap/dipstick and wipe it clean.
5. Insert the oil fill cap/dipstick until it seats, but don't screw it in.
6. Check that the oil level is between the upper level and lower level marks on the oil fill cap/dipstick.
7. Securely install the oil fill cap/dipstick.

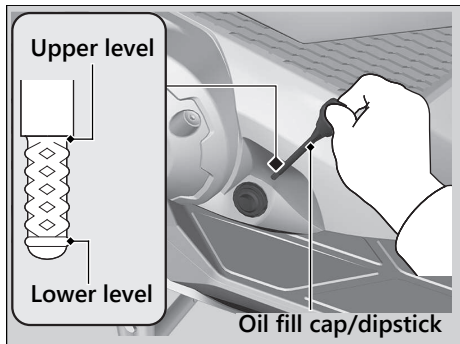

Adding Engine Oil

If the engine oil is below or near the lower level mark, add the recommended engine oil.

► P. 147, ► P. 233

1. Remove the oil fill cap/dipstick. Add the recommended oil until it reaches the upper level mark.
 - Place your vehicle on its centre stand on a firm, level surface when checking the oil level.
 - Do not overfill above the upper level mark.
 - Make sure no foreign objects enter the oil filler opening.
 - Wipe up any spills immediately.

2. Securely reinstall the oil fill cap/dipstick.

NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil. They may affect lubrication and clutch operation.

For the recommended oil and oil selection guidelines, see “Maintenance Fundamentals.”


► P. 147

Checking the Coolant

Check the coolant level in the reserve tank while the engine is cold.

1. Place your vehicle on a firm, level surface.
2. Hold your vehicle in an upright position.
3. Check that the coolant level is between the UPPER level and LOWER level marks on the reserve tank.

If the coolant level is dropping noticeably or the reserve tank is empty, you likely have a serious leak. Have your vehicle inspected by your dealer.

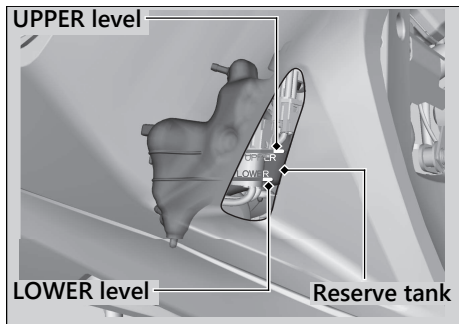

Adding Coolant

If the coolant level is below the LOWER level mark, add the recommended coolant (► P. 150) until the level reaches the UPPER level mark.


Add fluid only from the reserve tank cap and do not remove the radiator cap.

1. Remove the front lower cover. ► P. 157
2. Remove the reserve tank cap and add fluid while monitoring the coolant level.
 - Do not overfill above the UPPER level mark.
 - Make sure no foreign objects enter the reserve tank opening.
3. Securely reinstall the reserve tank cap.
4. Install the parts in the reverse order of removal.

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, potentially scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

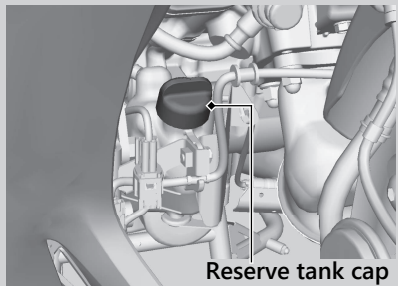


Reserve tank cap

Checking Brake Fluid

1. Place your vehicle in an upright position on a firm, level surface.
2. Check that the brake fluid reservoir is horizontal and that the fluid level is above the LOWER level mark.

If the brake fluid level in either reservoir is below the LOWER level mark or both the brake levers freeplay becomes excessive, inspect the brake pads for wear.

If the brake pads are not worn, you most likely have a leak. Have your vehicle inspected by your dealer.

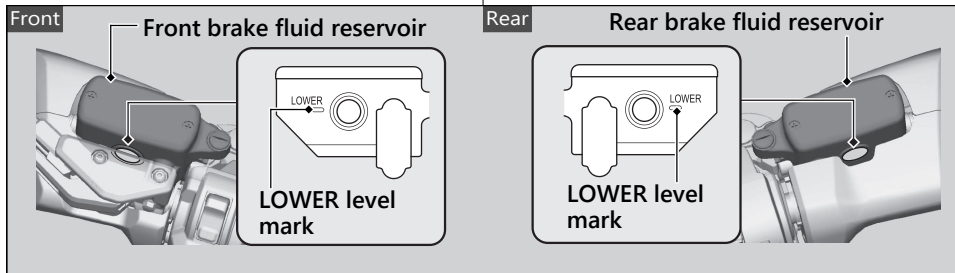

Inspecting the Brake Pads

Check the condition of the brake pad wear indicators.


Front The pads need to be replaced if a brake pad is worn to the bottom of the indicator.

Rear The pads need to be replaced if a brake pad is worn to the indicator.


1. **Front** Inspect the brake pads from in front of the brake caliper.
► Always inspect both left and right brake calipers.
2. **Rear** Inspect the brake pads from the rear right of the vehicle.

If necessary, have the pads replaced by your dealer.

Always replace both left and right brake pads at the same time.

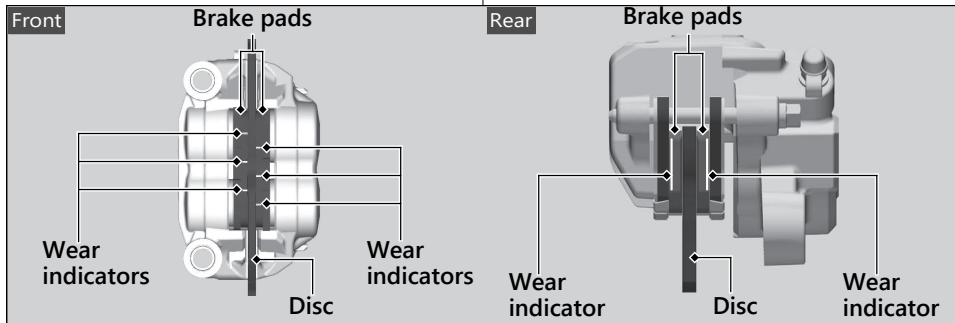

Checking the Parking Brake

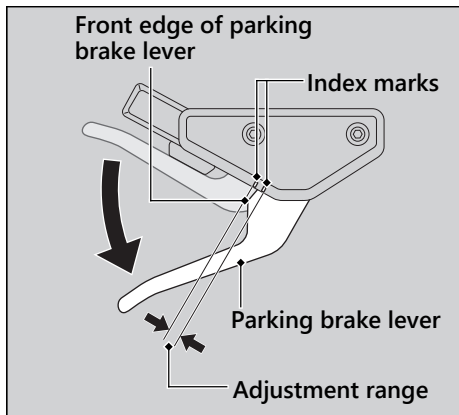


1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.

3. Rotate the rear wheel by hand and slowly pull the parking brake lever.
4. Check that the front edge of the parking brake lever is within the adjustment range (between the index marks), when the brake begins to take hold.

If the brake begins to take hold at out of the adjustment range, have the brake adjusted by your dealer.

Checking the Side Stand

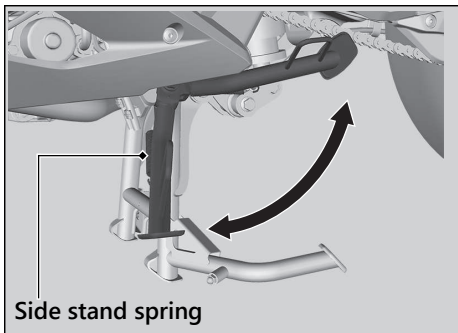

1. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.
2. Check the spring for damage or loss of tension.
3. Sit on the vehicle and raise the side stand.

4. Start the engine and press the D/M side on the N-D/M switch to switch the transmission into D mode.
5. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your vehicle inspected by your dealer.

Inspecting the Drive Chain Slack

Check the drive chain slack at several points along the chain. If the slack is not constant at all points, some links may be kinked and binding.

Have the chain inspected by your dealer.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.

3. Check the slack in the lower half of the drive chain midway between the sprockets.
 - ▶ While depressing the drive chain, measure the distance from the bottom of the swingarm to the drive chain.


Drive chain slack:

Swingarm to drive chain

40 - 45 mm (1.6 - 1.8 in)

- ▶ Do not ride your vehicle if the slack exceeds 50 mm (2.0 in).

Drive Chain ► Inspecting the Drive Chain Slack

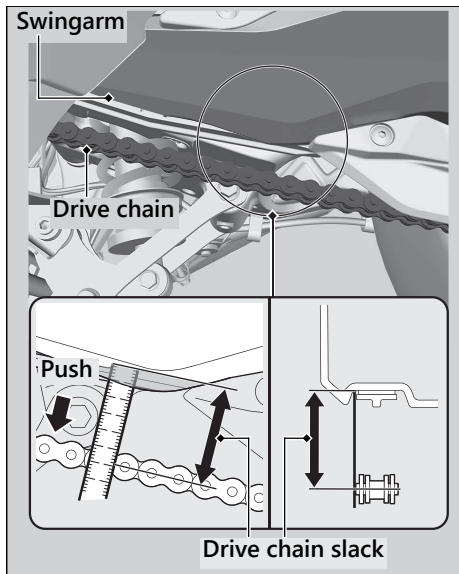


4. Rotate the rear wheel and check that the chain moves smoothly.
5. Inspect the sprockets. ► P. 148
6. Clean and lubricate the drive chain.
► P. 149

Checking the Drive Chain Slider


Check the condition of the drive chain slider. The drive chain slider will need to be replaced if the chain slider is worn to the wear limit line.

If necessary, have the drive chain slider replaced by your dealer.

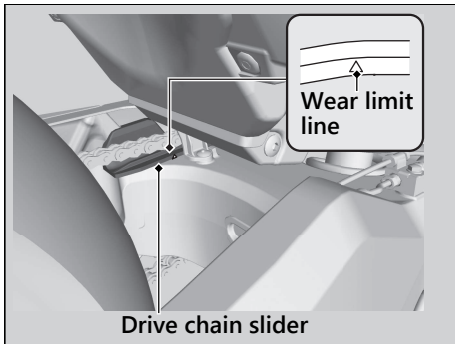

Checking the Throttle

With the engine off, check that the throttle rotates smoothly from fully closed to fully open. If the throttle does not move smoothly or close automatically, have the vehicle inspected by your dealer.

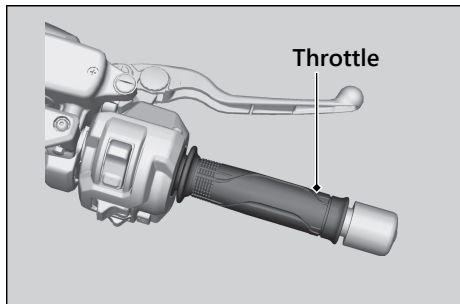

Adjusting the Brake Lever

You can adjust the distance between the brake lever and handle grip.


Adjustment method

Turn the adjuster until the numbers align with the index mark while pushing the lever forward in the desired position.


After adjustment, check that the lever operates correctly before riding.

NOTICE

Do not turn the adjuster beyond its natural limit.

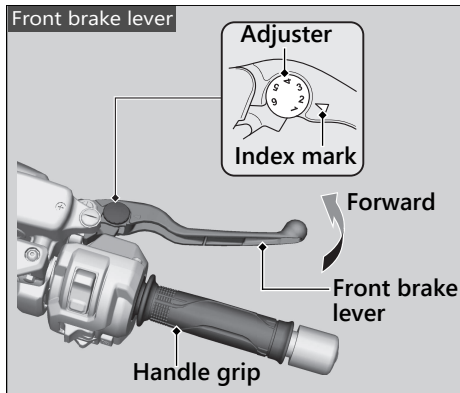

Other Adjustments ▶ Adjusting the Brake Lever

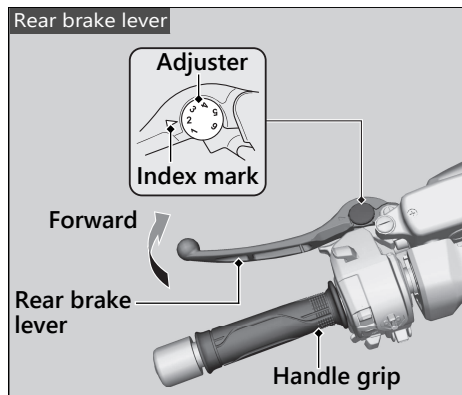

Adjusting the Rear Suspension

Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn the adjuster using the pin spanner and extension bar provided in the tool kit.

► P. 132


Position 1 to 3 decrease spring preload (soft), or turn the position 5 to 10 increase spring preload (hard). The standard position is 4.

NOTICE

Do not turn the adjuster beyond its limits. Attempting to adjust directly from 1 to 10 or 10 to 1 may damage the shock absorber.

NOTICE


The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.

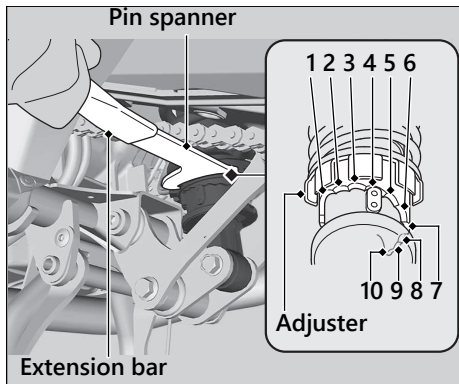

Replacing the Honda SMART Key Battery

If the Honda SMART Key indicator flashes 5 times when the electrical system is turned on, or the operating range becomes unstable, replace the battery as soon as possible. We recommend to see your dealer for this service.

Battery type: CR2032

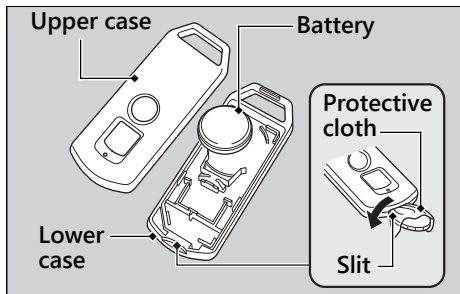

1. Remove the upper case by inserting a coin or a flat head screwdriver covered with a protective cloth into the slit.
 - ▶ Wrap a coin or a screwdriver with a protective cloth to prevent scratching the Honda SMART Key.
 - ▶ Do not touch the circuit or terminal. This may cause problems.
 - ▶ Be careful to avoid scratching the waterproof covering or allowing dust to enter.
 - ▶ Do not forcibly dismantle the Honda SMART Key body.
2. Replace the old battery with a new battery with the negative \ominus side facing up.

3. Snap the two halves of the remote transmitter back together.
 - Make sure that upper and lower cases are set in the right position.

⚠ WARNING

CHEMICAL BURN HAZARD

The battery that powers the Honda SMART Key can cause severe internal burns and can even lead to death if swallowed.

Keep new and used batteries away from children.

If you suspect that a child has swallowed the battery, seek medical attention immediately.

CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not expose to excessive heat such as sunshine, fire or the like, that can result in an explosion or the leakage of flammable liquid or gas during use, storage or transportation.
- Do not dispose of a battery into fire or a hot oven, or give mechanically crushing or cutting of a battery, that can result in an explosion.
- Do not subject to extremely low air pressure at high altitude that may result in an explosion or the leakage of flammable liquid or gas.

Other Replacement ► Replacing the Honda SMART Key Battery

Europe only

The battery is manufactured by:

- Maxell, Ltd.
1 Koizumi, Oyamazaki, Oyamazaki-cho,
Otokuni-gun, Kyoto 618-8525 Japan
- Panasonic Energy Co., Ltd.
1-1 Matsushita-cho, Moriguchi City, Osaka
570-8511, Japan
- TOSHIBA LIFESTYLE PRODUCTS &
SERVICES CORPORATION
1310 Omiya-cho, Saiwai-ku, Kawasaki,
Kanagawa 212-0014, Japan

The battery is imported by:

Honda Motor Europe Ltd - Aalst Office
Wijngaardveld 1(Noord V), 9300 Aalst -
Belgium



This product must not
be treated as
household waste.

Troubleshooting

Engine Will Not Start	P. 180
Overheating (High coolant temperature indicator is on)	P. 181
Warning Indicators On or Flashing	P. 182
Low Oil Pressure Indicator	P. 182
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 183
ABS (Anti-lock Brake System) Indicator	P. 184
Torque Control Indicator.....	P. 185
Honda SMART Key Indicator.....	P. 186
If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 187
Other Warning Indications	P. 188
Fuel Gauge Failure Indication.....	P. 188
Coolant Temperature Failure Indication.....	P. 189
When the Honda SMART Key System Does Not Operate Properly	P. 190
Unlock the Seat in an Emergency	P. 192
Activating the Electrical System in an Emergency	P. 193
Tyre Puncture	P. 199
Smartphone Pairing Trouble	P. 200
Electrical Trouble	P. 202
Battery Goes Dead.....	P. 202
Burned-out Light Bulb	P. 202
Blown Fuse.....	P. 203

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 111
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 111
- Check for a blown fuse. ➔ P. 203
- Check for a loose battery connection (➔ P. 155) or battery terminal corrosion (➔ P. 144).
- Check the condition of the battery. ➔ P. 202

If the problem continues, have your vehicle inspected by your dealer.

Overheating (High coolant temperature indicator is on)

The engine is overheating when the following occurs:

- High coolant temperature indicator comes on.
- Acceleration becomes sluggish.
If this occurs, pull safely to the side of the road and perform the following procedure.

Extended fast idling may cause the high coolant temperature indicator to come on.

NOTICE

Continuing to ride with an overheated engine can cause serious damage to the engine.

1. Stop the engine using the ignition switch, and then push the ignition **I** (On) switch to turn on the electrical system.

2. Check that the radiator fan is operating, and then turn the electrical system off.

If the fan is not operating:

Suspect a fault. Do not start the engine. Transport your vehicle to your dealer.

If the fan is operating:

Allow the engine to cool with the electrical system turned off.

3. After the engine has cooled, inspect the radiator hose and check if there is a leak.

➔ P. 163

If there is a leak:

Do not start the engine. Transport your vehicle to your dealer.

4. Check the coolant level in the reserve tank. ➔ P. 163
▶ Add coolant as necessary.
5. If 1-4 check normal, you may continue riding, but closely monitor the high coolant temperature indicator.

Low Oil Pressure Indicator

If the low oil pressure indicator comes on, pull safely to the side of the road and stop the engine.

NOTICE

Continuing to ride with low oil pressure can cause serious damage to the engine.

1. Check the engine oil level, and add oil as necessary. 📄 P. 161, 📄 P. 162
2. Start the engine.
 - ▶ Only continue riding if the low oil pressure indicator goes off.

Rapid acceleration may momentarily cause the low oil pressure indicator to come on, especially if the oil is at or near the low level. If the low oil pressure indicator stays on when the oil level is at the proper level, stop the engine and contact your dealer.

If the engine oil level goes down rapidly, your vehicle may have a leak or another serious problem. Have your vehicle inspected by your dealer.

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

FO, GS, TH type

If the indicator comes on while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your vehicle inspected by your dealer as soon as possible.

ED, II ED, KO type

Reasons for the indicator lamp to come on or blink

- Comes on if there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.

What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes with the engine stopped until it cools.

NOTICE

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 50 km/h (31 mph) or less. Have your vehicle inspected.

ABS (Anti-lock Brake System) Indicator

If the indicator operates in one of the following ways, you may have a serious problem with the ABS. Reduce your speed and have your vehicle inspected by your dealer as soon as possible.

- Indicator comes on or starts flashing while riding.
- Indicator does not come on when the electrical system is turned on.
- Indicator does not go off at speeds above 10 km/h (6 mph).

If the ABS indicator stays on, your brakes will continue to work as a conventional system, but without the anti-locking function.

The ABS indicator may flash if you turn the rear wheel while the rear wheel is lifted off the ground. In this case, turn the electrical system off and on again.. The ABS indicator will go off after your speed reaches 30 km/h (19 mph).

Torque Control Indicator

If the indicator operates in one of the following ways, you may have a serious problem with the Torque Control. Reduce your speed and have your vehicle inspected by your dealer as soon as possible.

- Indicator comes and stays on (solid) while riding.
- Indicator does not come on when the electrical system is turned on.
- Indicator does not go off at speeds above 5 km/h (3 mph).

Even when the Torque Control indicator is on, your vehicle will have normal riding ability without Torque Control function.

- When the indicator comes on while the Torque Control is in operation, you will have to completely close the throttle to regain normal riding ability.

The Torque Control indicator may come on if you rotate the rear wheel while your vehicle is lifted off the ground. In this case, turn the electrical system off and on again. The Torque Control indicator will go off after your speed reaches 5 km/h (3 mph).

Honda SMART Key Indicator

When the Honda SMART Key indicator flashes 5 times

Replacing the Honda SMART Key Battery ► P. 176


When the Honda SMART Key indicator is flashing while the electrical system is on


The Honda SMART Key indicator flashes when communication between your vehicle and Honda SMART Key stops after turning on the electrical system.

It is probably caused by the following:

- Strong radio waves or noise are affecting the system
- You lose the Honda SMART Key while riding

However, this does not affect the operation of your vehicle until the electrical system is off.

You may not be able to turn off the electrical system when losing the Honda SMART Key while riding, or if the battery is low, or because the system is affected by strong radio waves or noise. If this occurs, turn the ignition switch knob  (Off/Lock) counterclockwise and hold it until the electrical system shut off.

You can also turn off the electrical system by turning the ignition switch knob  (Off/Lock) counterclockwise 3 times within 3 seconds.

- Turn signals blink at the beginning and end of this function.

If you do not have the Honda SMART Key, the electrical system can be activated in another way. ► P. 193

If the “-” Indicator is Blinking in the Gear Position Window While Riding

If the “-” indicator is blinking while riding, you may have a serious problem with the Dual Clutch Transmission system.

Park your vehicle in a safe place and have your vehicle inspected by dealer immediately. It may be possible to ride your vehicle by following the steps below.

1. Turn the electrical system off.
2. Turn the electrical system on and start the engine.

If you cannot start the engine:

Turn the electrical system off and move the vehicle back and forth slightly (to disengage the gears).

Turn the electrical system on again and start the engine.

If you still cannot start the engine:

Start the engine while applying the front or rear brake lever.

If you can shift from N to D mode:

When a gear position is shown in the gear position indicator, you can ride in that gear. Take your vehicle to your dealer riding at a safe speed.



If you can't shift from N to D mode and the “-” indicator is blinking:

Damage is preventing you from riding. Have your vehicle inspected by your dealer immediately.

Fuel Gauge Failure Indication

If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustration.


If this occurs, see your dealer as soon as possible.

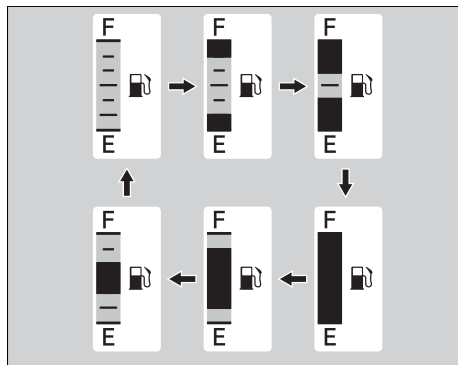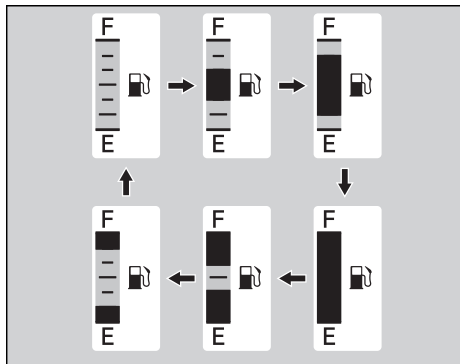

Coolant Temperature Failure Indication

If the cooling system has an error, coolant temperature “---” flashes.

If this occurs, see your dealer as soon as possible.

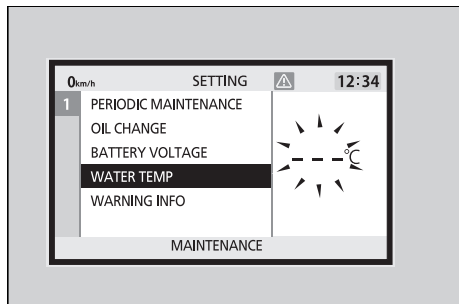

When the Honda SMART Key System Does Not Operate Properly

When the Honda SMART Key system does not work properly, perform the following.

- Check that the Honda SMART Key system is activated.

Lightly push the ON/OFF button on the Honda SMART Key.

If the Honda SMART Key LED is red, activate the Honda SMART Key system.

➤ P. 92

If the Honda SMART Key LED does not respond, replace the battery.

- Check that there is no communication failure in the Honda SMART Key system. The Honda SMART Key system uses low-intensity radio waves. The Honda SMART Key system may not work properly in the following conditions:
 - ▶ When there are facilities nearby that generate strong radio waves or noise such as TV towers, power stations, radio stations, or airports.
 - ▶ When you carry the Honda SMART Key with a laptop or wireless communication device such as a radio or mobile phone.
 - ▶ When the Honda SMART Key comes into contact with or is covered by metal objects.

When the Honda SMART Key System Does Not Operate Properly

- Check that a registered Honda SMART Key is used.
Use a registered Honda SMART Key. The Honda SMART Key system cannot be activated without a registered Honda SMART Key.
- Make sure that you do not use a broken Honda SMART Key.
If you use a broken Honda SMART Key, the Honda SMART Key system cannot be activated. Bring the emergency key and ID tag to your dealer.

- Check the battery condition and battery lead in your vehicle.
Check the battery and battery terminals. If the battery is weak, contact your dealer.

If the Honda SMART Key system cannot be activated due to other causes, contact your dealer.

Unlock the Seat in an Emergency


The seat lock can be unlocked by using the emergency key.

Open

1. Remove the emergency seat opener cap.
2. Insert the emergency key into the emergency seat opener, and turn the key counterclockwise.
3. Open the seat by pulling up the rear of the seat.

Close


1. Close the seat.  P. 130
2. Install the emergency seat opener cap.

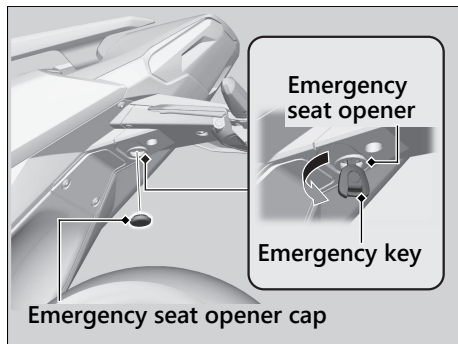

Activating the Electrical System in an Emergency

The electrical system can be activated by inputting the ID number.



Set up to ID number input mode

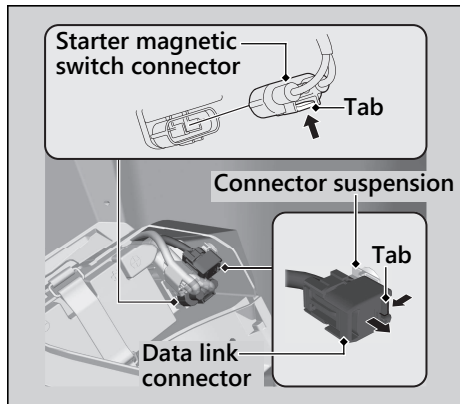

1. Use the emergency key to open the seat. P. 192
2. Remove the maintenance lid. P. 159
3. Push the tab to remove the data link connector from the connector suspension.
4. Push the tab to disconnect the starter magnetic switch connector from the starter magnetic switch.
5. Push the seat opener switch or fuel lid opener switch.
6. Reconnect the starter magnet switch connector to the starter magnet switch.

Activating the Electrical System in an Emergency

7. Push and hold the ignition **I** (On) switch for more than 4 seconds within 60 seconds after reconnecting the starter magnetic switch connector.
 - ▶ The steering lock indicator comes on, the buzzer sounds and the system enters the ID number input mode.
8. Check the ID number on the ID tag.

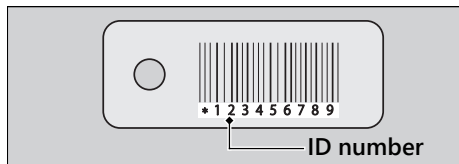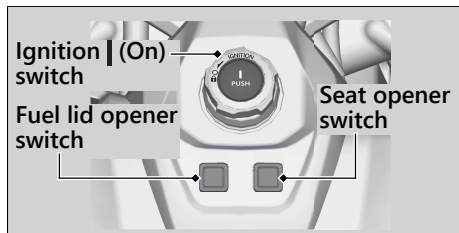

■ ID number input

You can input your ID number by pushing the ignition **■** (On) switch and Turn the ignition switch knob **○/🔒** (Off/Lock) counterclockwise. Input the ID number on the ID tag in order from the left in turn by pushing the ignition **■** (On) switch.



The ID number is input according to the number of times the ignition **■** (On) switch is pushed.


Push the ignition **■** (On) switch the desired number of times, then turn the ignition switch knob **○/🔒** (Off/Lock) counterclockwise to fix the current digit (the buzzer sounds and the steering lock indicator goes off briefly and comes on again), and input the next digit, and then repeat until all the digits are input.



While inputting the ID number, if the button is not pressed for about 60 seconds, the inputted ID number is cancelled and the system returns to the state before disconnect the starter magnetic switch connector (the buzzer sounds and the steering lock indicator goes off).


Activating the Electrical System in an Emergency

Example:

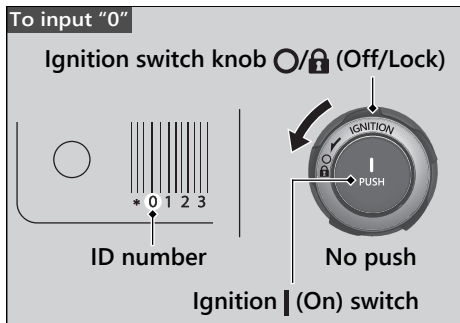- To input "0", turn the ignition switch knob  (Off/Lock) counterclockwise without pushing the ignition  (On) switch, and then input next digit.



- To input "1", push the ignition  (On) switch once, and then turn the ignition switch knob  (Off/Lock) counterclockwise to input the next digit.

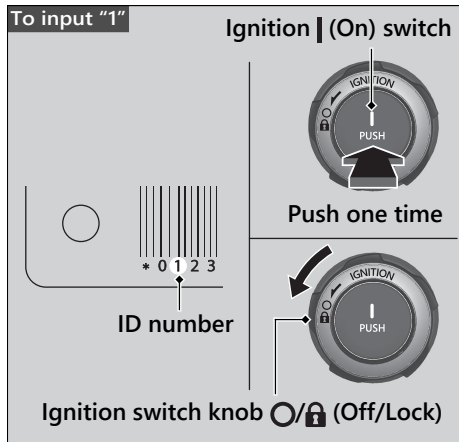

ID number input success

After the last digit of the ID number is inputted, ID number is authenticated, the steering lock indicator will flash every 2 seconds.

Push the ignition **I** (On) switch within 30 seconds after the ID number is authenticated.

If the steering is locked

The steering will be unlocked. To activate the electrical system, push the ignition **I** (On) switch once again within 30 seconds after the ID number is authenticated.

If the steering is unlocked

The electrical system will be activated. You can start the engine.

Reinstall the parts in the reverse order of removal before riding.

You can turn off the engine and electrical system and also lock the steering using the ignition switch. The ignition **I** (On) switch operation is disabled 30 seconds after the electrical system is turned off.

To activate the electrical system again, repeat the procedures for activating the electrical system in an emergency.

Activating the Electrical System in an Emergency

ID number input failure

If the ID number is not authenticated after inputting, the buzzer sounds and the steering lock indicator goes off. The steering cannot be unlocked and the electrical system will not activate.

Repeat the procedures for activating the electrical system in an emergency.

ID number input cancel

If you input the wrong number, you can cancel ID number input by not operating the ignition **I** (On) switch for about 60 seconds (the steering lock indicator goes off).

Repeat the procedures for activating the electrical system in an emergency.

Tyre Puncture

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tyre inspected/replaced by your dealer.

Emergency Repair Using a Tyre Repair Kit

If your tyre has a minor puncture, you can make an emergency repair using a tubeless tyre repair kit.

Follow the instructions provided with the emergency tyre repair kit.

Riding your vehicle with a temporary tyre repair is very risky. Do not exceed 50 km/h (30 mph). Have the tyre replaced by your dealer as soon as possible.

WARNING

Riding your vehicle with a temporary tyre repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tyre repair, ride slowly and carefully and do not exceed 50 km/h (30 mph) until the tyre is replaced.

Smartphone Pairing Trouble

ED, II ED, FO, KO, TH type

Symptom	Cause/remedy
Unable to pair a smartphone	Some smartphones you use may be incompatible with the vehicle and/or the operable functions may be limited.
	Check that the vehicle and smartphone are both in pairing mode. ➤ P. 103
	Check your surroundings to make sure no other device being paired is present before re-pairing. Presence of a <i>Bluetooth</i> [®] device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
	When connecting a smartphone, make sure no other <i>Bluetooth</i> [®] device readied for pairing is present. Presence of a <i>Bluetooth</i> [®] device in the vicinity sometimes affects the pairing due to radio wave interference, etc.
Check that the vehicle pairing information is deleted from your smartphone <i>Bluetooth</i> [®] setting. Depending on the smartphone used, connecting may not be possible unless the pairing information is deleted.	

Symptom	Cause/remedy
<p>Unable to connect a smartphone</p>	<p>Depending on the smartphone you use, it may take some time for the vehicle to connect to a smartphone and to start using a dedicated application.</p>
	<p>The connection may be temporarily disconnected when starting the engine, which is normal and not a malfunction. The smartphone will be reconnected after the engine is started.</p>
	<p>Check that <i>Bluetooth</i>[®] status icon comes on. Refer to the instruction manual of your smartphone and check that your smartphone is in connectable state.</p>
	<p>Some smartphones you use may not connect automatically. For connecting, follow the instructions in the instruction manual of your smartphone.</p>
	<p>You cannot connect two or more smartphones at once.</p>

If the problem continues after the above-described inspection, have your vehicle inspected by your dealer.

Battery Goes Dead

Charge the battery using a motorcycle battery charger.

Remove the battery from the vehicle before charging.

Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage. If the battery does not recover after recharging, contact your dealer.

NOTICE

Jump starting using an automobile battery can damage your vehicle's electrical system and is not recommended.


Burned-out Light Bulb

All light bulbs on the vehicle are LEDs. If there is an LED which is not turned on, see your dealer for servicing.

Blown Fuse


Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 146

Fuse Box A Fuses

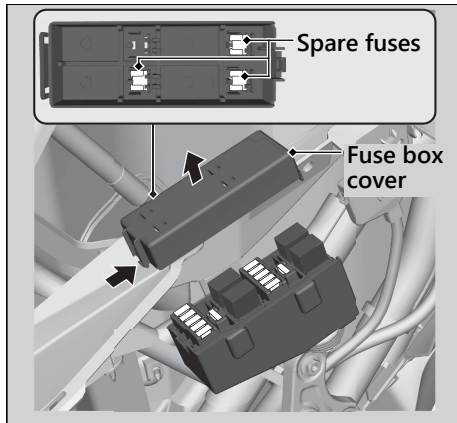


1. Remove the left side cover. ► P. 160
2. Remove the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare fuses are provided on back side of the fuse box cover.
4. Reinstall the parts in the reverse order of removal.

■ Fuse Box B Fuses

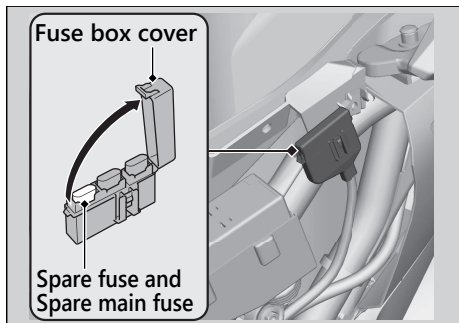


1. Remove the left side cover. ► P. 160
2. Open the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - The spare fuse also used as spare for the main fuse.
4. Reinstall the parts in the reverse order of removal.

I Main Fuse

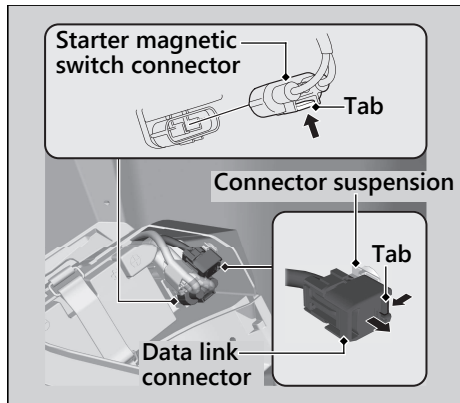

1. Remove the maintenance lid. P. 159
2. Push the tab to remove the data link connector from the connector suspension.
3. Disconnect the starter magnetic switch connector of the starter magnetic switch.

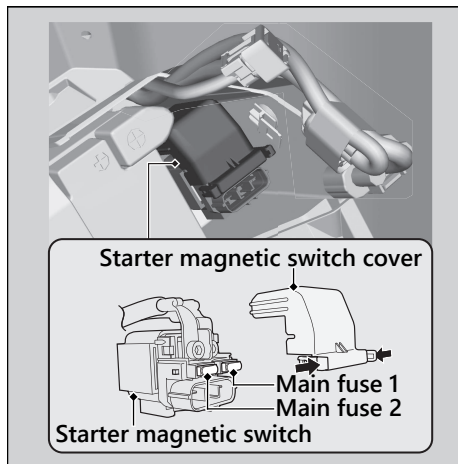

4. Remove the starter magnetic switch cover.

5. Pull the main fuse 1 and main fuse 2 out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare main fuse is in the fuse box B.
 - P. 204

6. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.

Information

Service Diagnostic Recorders	P. 208
Keys.....	P. 209
Instruments, Controls, & Other Features...	P. 213
Caring for Your Vehicle.....	P. 222
Storing Your Vehicle.....	P. 226
Transporting Your Vehicle	P. 227
You & the Environment	P. 228
Serial Numbers	P. 229
Fuels Containing Alcohol	P. 230
Catalytic Converter	P. 231

Service Diagnostic Recorders

ED, II ED, KO type

Your vehicle is equipped with service-related devices that record information about powertrain performance and riding conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

Keys

Emergency Key

This vehicle has emergency keys and a key tag with a key number and a bar code. Store the key tag in a safe location.


To make a duplicate key, take the key and key tag to your dealer or a locksmith.

If you lose the emergency key and key tag, the emergency seat opener assembly will probably have to be removed by your dealer to determine the key number.

The emergency key is used for an emergency.

- To unlock the seat. ➤ P. 192

Do not store the emergency key in any compartment.

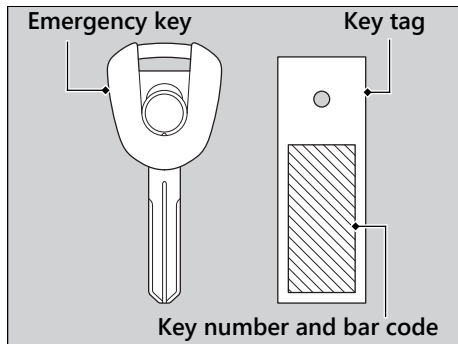

Honda SMART Key

Carrying the Honda SMART Key allows you to perform the following operations:

- Releasing the seat lock
- Releasing the fuel lid lock
- Locking or unlocking the steering and activating or deactivating the electrical system

The ID number of the Honda SMART Key is on the ID tag. You can also activate the electrical system by inputting the ID number.

Always carry both the emergency key and ID tag, but separate from the Honda SMART Key, to avoid losing all of them at the same time.

Also store a copy of your ID number in a safe place other than your vehicle.

The Honda SMART Key contains electronic circuits. If the circuits are damaged, the Honda SMART Key will not allow you to perform any operations.


- Do not drop the Honda SMART Key or set heavy objects on them.
- Protect the Honda SMART Key from direct sunlight, high temperature, and high humidity.
- Do not scratch or puncture.
- Do not store near any magnetized products such as a magnetized key chain.
- Always keep the Honda SMART Key away from electric appliances such as a TV, radio, PC or low-frequency massage device.
- Keep the Honda SMART Key away from liquids. If it gets wet, dry it immediately with a soft cloth.
- Keep the Honda SMART Key away from the vehicle while washing the vehicle.
- Do not burn.
- Do not wash in an ultrasonic cleaner.

- If fuel, wax, or grease adhere to the Honda SMART Key, wipe it off immediately to avoid cracking or warping.
- Do not disassemble the Honda SMART Key other than when changing a battery. Only the cover of the Honda SMART Key can be disassembled. Do not disassemble other parts.
- Do not lose your Honda SMART Key. If you lose it, you will need to register a new Honda SMART Key. See your dealer with your emergency key and ID tag for registration.

The battery in the Honda SMART Key system normally lasts about 2 years.

Do not keep mobile phones or other radio transmitting devices in any compartment. The radio frequency from the devices will interrupt the Honda SMART Key system.

To get an additional Honda SMART Key, take the Honda SMART Key and the vehicle to your dealer.

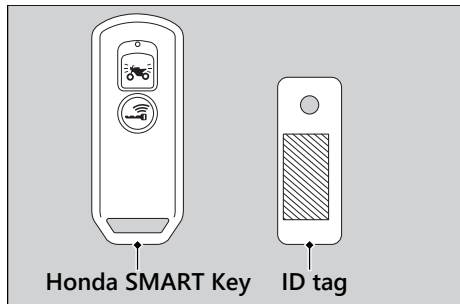

EU Directive

This Honda SMART Key system complies with the RE (Radio Equipment) Directive (2014/53/EU).



The declaration of conformity to RE Directive is provided to the owner at the time of purchase. The declaration of conformity should be kept at a safe place. When the declaration of conformity is lost or is not provided, contact your dealer.

Taiwan only

根據LP0002低功率射頻器材技術規範_章節3.8.2: 取得審驗證明之低功率射頻器材, 非經核准, 公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。前述合法通信, 指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Instruments, Controls, & Other Features


Ignition Switch

Leaving the electrical system with the engine stopped will drain the battery.

Do not operate the ignition switch while riding.

Engine Stop Switch

Do not use the engine stop switch except in an emergency. Doing so when riding will cause the engine to suddenly turn off, making riding unsafe.

If you stop the engine using the engine stop switch, turn the ignition switch knob  (Off/Lock) counterclockwise to turn off the electrical system. Failing to do so will drain the battery.

Odometer

The display remains at 999,999 when the odometer exceeds 999,999.

Tripmeter

Each tripmeter resets to 0.0 when the trip mileage exceeds 9,999.9.

Document Bag

The owner's manual, registration, and insurance information can be stored in the plastic document bag located reverse side of the seat.

Ignition Cut-off System

A banking (lean angle) sensor automatically stops the engine and fuel pump if the vehicle falls over. To reset the sensor, you must turn the electrical system off and back to the on before the engine can be restarted.

Throttle by Wire System


This model is equipped with a Throttle by Wire System.

Do not put magnetized items or items susceptible to magnetic interference near the right handlebar switches.

DRL, Automatic Brightness Control and Background Control

Ambient brightness is detected by the photosensor.

Do not damage or cover the photosensor. Otherwise, the DRL, automatic brightness control and background control may not work properly.

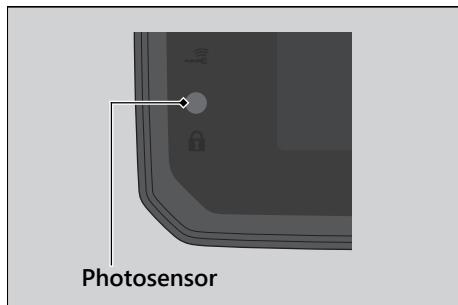

Honda RoadSync

ED, II ED type

EU Directive

Simplified EU DoC:

Hereby, Visteon Corporation declares that the radio equipment type SAB01is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.visteondocs.com/>

български [Bulgarian]	С това фирмата Visteon Corporation декларира, че частта SAB01 е в съответствие със съществените изисквания и други приложими разпоредби на директивата 2014/53/EC.
Česky [Czech]	Visteon Corporation tímto prohlašuje, že tento SAB01 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.
Dansk [Danish]	Undertegnede Visteon Corporation erklærer herved, at følgende udstyr SAB01 overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.
Deutsch [German]	Hiermit erklärt Visteon Corporation , dass sich das Gerät SAB01 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet.
Eesti [Estonian]	Käesolevaga kinnitab Visteon Corporation seadme SAB01 vastavust direktiivi 2014/53/EL põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, Visteon Corporation , declares that this SAB01 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
Español [Spanish]	Por medio de la presente Visteon Corporation declara que el SAB01 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/UE.

Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Visteon Corporation ΔΗΛΩΝΕΙ ΟΤΙ SAB01 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/ΕΚ.
Français [French]	Par la présente Visteon Corporation déclare que l'appareil SAB01 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/UE.
Italiano [Italian]	Con la presente Visteon Corporation dichiara che questo SAB01 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/UE.
Latviski [Latvian]	Ar šo Visteon Corporation deklarē, ka SAB01 atbilst Direktīvas 2014/53/ΕΚ būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo Visteon Corporation deklaruoja, kad šis SAB01 atitinka esminius reikalavimus ir kitas 2014/53/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart Visteon Corporation dat het toestel SAB01 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EG.
Malti [Maltese]	Hawnhekk, Visteon Corporation , jiddikjara li dan SAB01 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 2014/53/UE.
Magyar [Hungarian]	Alulírott, Visteon Corporation nyilatkozik, hogy a SAB01 megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym Visteon Corporation oświadcza, że SAB01 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/UE.
Português [Portuguese]	Visteon Corporation declara que este SAB01 está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/UE.
Slovensko [Slovenian]	Visteon Corporation izjavlja, da je ta SAB01 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/ES.
Slovensky [Slovak]	Visteon Corporation týmto vyhlasuje, že SAB01 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EÚ.

Instruments, Controls, & Other Features

Suomi [Finnish]	Visteon Corporation vakuuttaa täten että SAB01 tyyppinen laite on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar Visteon Corporation att denna SAB01 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.
Íslenska [Icelandic]	Hér með lýsir Visteon Corporation yfir því að SAB01 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.
Norsk [Norwegian]	Visteon Corporation erklærer herved at utstyret SAB01 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 2014/53/EF.
Crnogorski jezik, Црногорски jezik [Montenegrin]	Ovim, Visteon Corporation , izjavljuje da ovaj SAB01 je uskladen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 2014/53/UE.
Română [Romanian]	Prin prezenta, Visteon Corporation , declară că acest SAB01 respectă cerințele esențiale și alte dispoziții relevante din Directiva 2014/53 / UE.
Türkiye [Turkey]	Visteon Corporation , işbu SAB01 'in 2014/53 / EU Direktifinin esas şartları ve diğer ilgili hükümlerine uygun olduğunu beyan eder.
Hrvatska [Croatian]	Ovime Visteon Corporation izjavljuje da je ovaj SAB01 u skladu s osnovnim zahtjevima i ostalim relevantnim odredbama Direktive 2014/53 / EU.

The following information shall also be included in the case of radio equipment intentionally emitting radio waves:

- a. Frequency band : **2.4 GHz**
- b. Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates. **Max output power = 3.5 dBm**

U.K. only


 The logo consists of the letters 'UK' stacked above 'CA' in a bold, black, sans-serif font.

Hereby, Visteon Corporation declares that the radio equipment type SAB01 is in compliance with the relevant statutory requirement. The full text of the Declaration of Conformity is available at the following internet address:

www.visteondocs.com

Frequency band : _2.4_ GHz

- a. Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates.
- b. Max output power = _3.5_ dBm

Taiwan only


 The logo features a stylized circular symbol on the left, followed by the alphanumeric string 'CCAH22LP5190T1' in a bold, black, sans-serif font.

1. Product name: Bluetooth unit
2. Model name: SAB01
3. Manufacturer: Visteon Corporation

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾

Instruments, Controls, & Other Features

South Korea only



해당 무선설비는 운용 중 전파혼신 가능성이 있으므로, 인명 안전과 관련된 서비스는 할 수 없습니다.

(It means that, as this radio equipment has the possibility of radio interference, this equipment cannot be used for any services related to human life safety)

KC logo along with the following information (Conformity assessment information -인증 정보):

Company name of Applicant (인증 받은 자의 상호): Visteon Corporation

 
Manufacturing date (제조연월일): Refer Physical label on Unit.

Manufacturer/ Country of origin (제조사/제조국가): USA

Equipment name/ Model name (기자재의 명칭/ 모델명): SAB01

Conformity assessment number (인증번호): **R-R-VC1-SAB01**

Singapore only



Serbia only



Thailand only

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.”



nano.

เครื่องวิทยุคมนาคมนี้ได้รับยกเว้น ไม่ต้องได้รับ
ใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม
หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช.
เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ
คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิทยุคมนาคม ตามพระราชบัญญัติวิทยุ
คมนาคม พ.ศ. 2498



nano. ครอบคลุม
กำกับดูแลเมื่อส-ฮอน
Call Center 1200 (Inswifi)

Caring for Your Vehicle

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean vehicle makes it easier to spot potential problems. In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Also, mud and dust may accelerate front suspension wear and cause oil leaks. Always wash your vehicle thoroughly after riding on coastal, treated, muddy or dusty roads.

Washing

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your vehicle thoroughly using a low pressure garden hose to remove loose dirt.

2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
 - ▶ Clean the windshield, headlight lens, panels, and other plastic components with extra care to avoid scratching them. Avoid directing water into the air cleaner, muffler, and electrical parts.
3. Thoroughly rinse your vehicle with plenty of clean water and dry with a soft, clean cloth.
4. After the vehicle dries, lubricate any moving parts.
 - ▶ Make sure that no lubricant spills onto the brakes or tyres. Brake discs, pads, drum or shoes contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Lubricate the drive chain immediately after washing and drying the vehicle.
6. Apply a coat of wax to prevent corrosion.
 - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your vehicle.

- Keep the wax clear of the tyres and brakes.
- ▶ If your vehicle has any mat painted parts, do not apply a coat of wax to the mat painted surface.

■ Washing Precautions

Follow these guidelines when washing:

- Do not use high-pressure washers:
 - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
 - ▶ Water in the air intake can be drawn into the throttle body and/or enter the air cleaner.
- Do not direct water at the muffler:
 - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
- Dry the brakes:
 - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
- Do not direct water under the seat:
 - ▶ Water in the under seat compartment can damage your documents and other belongings.

Caring for Your Vehicle

- Do not direct water at the air cleaner:
 - ▶ Water in the air cleaner can prevent the engine from starting.
- Do not direct water near the headlight:
 - ▶ The headlight's inside lens may fog temporarily after washing or while riding in the rain. This does not impact the headlight function.
However, if you see a large amount of water or ice accumulated inside the lens(es), have your vehicle inspected by your dealer.
- Do not use wax or polishing compounds on mat painted surfaces:
 - ▶ Use a soft cloth or sponge, plenty of water, and a mild detergent to clean mat painted surfaces. Dry with a soft clean cloth.

Aluminium Components

Aluminium will corrode from contact with dirt, mud, or road salt. Clean aluminium parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

Panels

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.
- Avoid getting petrol, brake fluid, or detergents on the instruments, panels, or headlight.

Windscreen

Keep the windscreen raised after turning of the electrical system to make it easy to clean.

➤ P. 45

Using plenty of water, clean the windscreen with a soft cloth or sponge. (Avoid using detergents or any kind of chemical cleaner on the windscreen.) Dry with a soft, clean cloth.

NOTICE

To avoid possible scratching or other damage, use only water and a soft cloth or sponge to clean the windscreen.

For a dirtier windscreen, use a diluted neutral detergent with a sponge and plenty of water. Make sure to wash off all the detergent. (Detergent residue may cause windscreen cracks.)

Replace the windscreen if scratches cannot be removed and they obstruct clear vision.

Take care to keep battery electrolyte, brake fluid, or other chemical solvents off the windscreen and screen garnish. They will damage the plastic.

Exhaust Pipe and Muffler

The exhaust pipe and muffler are stainless steel but may become stained by mud or dust.

To remove mud or dust, use a wet sponge and a liquid kitchen abrasive, then rinse well with clean water. Dry with chamois or a soft towel.

If necessary, remove heat stains by using a commercially available fine texture compound. Then, rinse by the same manner as removing mud or dust.

Storing Your Vehicle

If the exhaust pipe and muffler are painted, do not use a commercially available abrasive kitchen cleaning compound. Use a neutral detergent to clean the painted surface on the exhaust pipe and muffler. If you are not sure if your exhaust pipe and muffler are painted, contact your dealer.

NOTICE

Even though the exhaust is made of stainless steel, it can become stained. Remove all marks and blemishes as soon as they are noticed.

Storing Your Vehicle

If you store your vehicle outdoors, you should consider using a full-body cover.

If you won't be riding for an extended period, follow these guidelines:

- Wash your vehicle and wax all painted surfaces (except mat painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Lubricate the drive chain. ➔ P. 148
- Place your vehicle on its centre stand and position a block so that both tyres are off the ground.
- After rain, remove the body cover and allow the vehicle to dry.
- Remove the battery (➔ P. 155) to prevent discharge. Fully charge the battery and then place it in a shaded, well-ventilated area.
 - ▶ If you leave the battery in place, disconnect the negative ⊖ terminal to prevent discharge.

After removing your vehicle from storage, inspect all maintenance items required by the Maintenance Schedule.

Transporting Your Vehicle

If your vehicle needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform and motorcycle tie-down straps. Never try to tow your vehicle with a wheel or wheels on the ground.

NOTICE

Towing your vehicle with a wheel or wheels on the ground can cause serious damage to the transmission.

You & the Environment

Owning and riding a vehicle can be enjoyable, but you must do your part to protect the environment.

Choose Sensible Cleaners



Use a biodegradable detergent when you wash your vehicle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.

Recycle Wastes

Put oil and other toxic wastes in approved containers and take them to a recycling centre. Call your local or state office of public works or environmental services to find a recycling centre in your area and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash or pour it down a drain or on the ground. Used oil, petrol, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.

Serial Numbers

The frame and engine serial numbers uniquely identify your vehicle and are required in order to register your vehicle. They may also be required when ordering replacement parts. The engine number is stamped on the right rear side of the crankcase. You should record these numbers and keep them in a safe place.

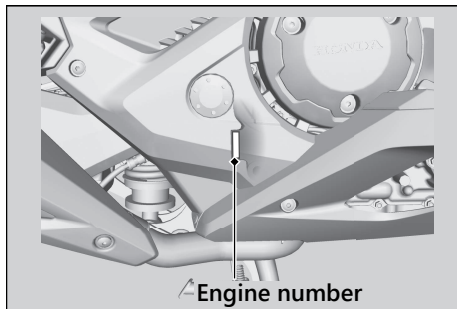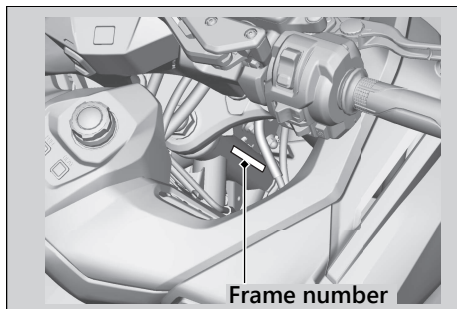

Fuels Containing Alcohol

Except TH type

Some conventional fuels blended with alcohol are available in some locales to help reduce emissions to meet clean air standards. If you plan to use blended fuel, check that it is unleaded and meets the minimum octane rating requirement.

The following fuel blends can be used in your vehicle:

- Ethanol (ethyl alcohol) up to 10% by volume.
 - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

The use of petrol containing more than 10% ethanol may:

- Damage the painting of the fuel tank.
- Damage the rubber tubes of the fuel line.
- Cause corrosion of the fuel tank.
- Cause poor drivability.

NOTICE

Use of blended fuels containing higher than approved percentages can damage metal, rubber, plastic parts of your fuel system.

If you notice any undesirable operating symptoms or performance problems, try a different brand of petrol.

TH type

Some conventional fuels blended with alcohol are available in some locales to help reduce emissions to meet clean air standards. If you plan to use blended fuel, check that it is unleaded and meets the minimum octane rating requirement.

The following fuel blends can be used in your vehicle:

- Ethanol (ethyl alcohol) up to 20% by volume.
 - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

NOTICE

Use of blended fuels containing higher than approved percentages can damage metal, rubber, plastic parts of your fuel system.

If you notice any undesirable operating symptoms or performance problems, try a different brand of petrol.

Catalytic Converter

This vehicle is equipped with a three-way catalytic converter. The catalytic converter contains precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gases into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your vehicle's catalytic converter:

- Always use unleaded petrol. Leaded petrol will damage the catalytic converter.
- Keep the engine in good running condition.
- Have your vehicle serviced if your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine.

Specifications

■ Main Components

Overall length	2,200 mm (86.6 in)	
Overall width	790 mm (31.1 in)	
Overall height	Highest windscreen position	1,480 mm (58.3 in)
	Lowest windscreen position	1,360 mm (53.5 in)
Wheelbase	1,580 mm (62.2 in)	
Minimum ground clearance	135 mm (5.3 in)	
Caster angle	27° 00'	
Trail	104 mm (4.1 in)	
Curb weight	ED, II ED, FO, GS, TH type	236 kg (520 lb)
	KO type	235 kg (518 lb)
Maximum weight capacity *1	ED, II ED, FO, GS, TH type	199 kg (439 lb)
	KO type	179 kg (395 lb)
Maximum luggage weight	ED, II ED type	21 kg (46 lb)
Maximum weight on luggage box	5.0 kg (11.0 lb)	
Maximum weight on fairing pocket	0.3 kg (0.66 lb)	
Passenger capacity	Rider and 1 passenger	
Minimum turning radius	2.80 m (9.2 ft)	
Displacement	745 cm ³ (45.4 cu-in)	

Bore x stroke	77.0 x 80.0 mm (3.03 x 3.15 in)	
Compression ratio	10.7 : 1	
Fuel	Unleaded petrol	
	Recommended: 91 RON or higher	
Fuel containing alcohol	Except TH type	ETHANOL up to 10 % by volume
	TH type	ETHANOL up to 20 % by volume
Tank capacity	13.2 L (3.49 US gal, 2.90 Imp gal)	
Battery	YTZ12S	
	12 V-11.0 Ah (10 HR) / 12 V-11.6 Ah (20 HR)	
Gear ratio	1st	2.666
	2nd	1.904
	3rd	1.454
	4th	1.178
	5th	0.967
	6th	0.815
Reduction ratio (primary / final)	1.921 / 2.235	

*1: Including rider, passenger, all luggage, and accessories

■ Service Data

Tyre size	Front	120/70R17M/C 58H
	Rear	160/60R15M/C 67H
Tyre type	Radial, tubeless	
Recommended Tyre	Front	Except KO type BRIDGESTONE BATTLAX SPORT TOURING T31F J
		PIRELLI DIABLO ROSSO SCOOTER
	Rear	Except KO type BRIDGESTONE BATTLAX SPORT TOURING T31R J
		PIRELLI DIABLO ROSSO SCOOTER
Tyre category of use *1	Normal	Permitted
	Special	Not Permitted
	Snow	Not Permitted
	Moped	Not Permitted
Tyre air pressure	Front	280 kPa (2.80 kgf/cm ² , 41 psi)
	Rear	250 kPa (2.50 kgf/cm ² , 36 psi)
Minimum tread depth	Front	1.5 mm (0.06 in)
	Rear	2.0 mm (0.08 in)
Spark plug	(standard)	IFR6G-11K (NGK)
Spark plug gap	(non-adjustable)	1.00 - 1.10 mm (0.039 - 0.043 in)
Idle speed	1,200 ± 100 rpm	

*1: EU regulation

Recommended engine oil	Honda 4-stroke motorcycle oil API Service Classification SJ or higher, excluding oils marked as "Energy Conserving" or "Resource Conserving," SAE 10W-30, JASO T 903 standard MA	
	After draining	3.1 L (3.3 US qt, 2.7 Imp qt)
Engine oil capacity	After draining & engine oil filter change	3.4 L (3.6 US qt, 3.0 Imp qt)
	After draining, engine & clutch oil filter change	3.4 L (3.6 US qt, 3.0 Imp qt)
	After disassembly	4.0 L (4.2 US qt, 3.5 Imp qt)
	Recommended brake fluid	Honda DOT 4 Brake Fluid
Cooling system capacity	1.44 L (1.52 US qt, 1.27 Imp qt)	
Recommended coolant	Except Singapore, Hong Kong, Taiwan, Thailand	
	Pro Honda HP Coolant	
	Singapore, Hong Kong, Taiwan, Thailand HONDA PRE-MIX COOLANT	

Specifications

Recommended drive chain lubricant	Drive chain lubricant designed specifically for O-ring chains
	If not available, use SAE 80 or 90 gear oil.
Drive chain slack	40 - 45 mm (1.6 - 1.8 in)
Standard drive chain	DID520V0
	No. of links 118
Standard sprocket size	Drive sprocket 17T
	Driven sprocket 38T

■ Bulbs

Headlight	LED
DRL	LED
Brakelight/Taillight	LED
Front turn signal light	LED
Rear turn signal light	LED
Position light	LED
License plate light	LED

■ Fuses

Main fuse	30 A
Other fuse	30 A, 15 A, 10 A

Thailand only

HELMET CAUTION LABEL

⚠ คำเตือน

อาจถึงตายหรือพิการ หากไม่สวม
หมวกนิรภัย และไม่ควรให้เด็ก
ที่เท้ายังไม่ถึงที่วางเท้าโดยสาร

Online Owner's Manual

<https://www.hondamotopub.com/>



32MKV610
00X32-MKV-6100

XXX.XXXX.XX.S
PRINTED IN XXXXX